DC24V 専用

SC-UG08S/N FPSC モジュール 08 SC-TG08S/N FPSC ユニット 08



取扱説明書



●もくじ

7. 準備

8. 配線

14. 仕様

9. 使いかた

12. こんなときは

13. 廃棄のしかた

16. お問い合わせ

15. アフターサービス

10. 保護機能について

11. 動作インジケーターと機能

この度は、弊社「FPSC モジュール 08」 「FPSC ユニット 08」をお買い上げいただき、 誠にありがとうございます。

- この取扱説明書をよくお読みの上、正しく ご使用ください。
- 特に「安全上のご注意」は、ご使用前に必ず お読みいただき、安全にご使用ください。
- 輸出に関する「輸出規制について(重要)」を 必ずお読みください。
- この取扱説明書は必ず保管し、必要な時に お読みください。
- 本製品の仕様を満足する範囲において、性 能向上のため、部品など一部を連絡なしに 変更する場合があります。
- 本製品を搭載した完成機器における規格、 法令等の適合性については貴社にてご確 認願います。

		 -
●ŧ	くじ	Page
-	表紙	 1
-	お問合わせ	 1
1.	製品の使用条件(免責事項)	 2
2.	輸出規制について(重要)	 4
3.	安全上のご注意	 5
4.	セット内容	 8
5.	各部の機能と名称	 9
6.	設置	 12

. . .

...

...

...

...

. . .

. . .

. . .

. . .

...

19

20

24

27

30

31

38

41

47

48

DC24V ONLY

SC-UG08S/N FPSC MODULE 08 SC-TG08S/N FPSC UNIT 08

User's Manual



SC-UG08

D -----

	●Co	ntents		Page
Thank you for choosing TWINBIRD	-	Cover Page	•••	1
"FPSC MODULE 08" and "FPSC	-	Contact	•••	1
UNIT 08"	1.	Disclaimer	•••	2
Read this user's manual carefully and	2.	Restriction of Export(Important)	•••	4
use it correctly.	3.	Safety Notice	•••	5
Be sure to check "Safety Notice"	4.	Set Components	•••	8
before use, and use it safely.	5.	Parts Name and Function	•••	9
Be sure to check "Restriction of	6.	Installation	•••	12
Export(Important)" on exports.	7.	Preparing	•••	19
Be sure to keep this user's manual	8.	Wiring	•••	20
and read it when necessary.	9.	How to use	•••	24
FPSC and associated parts may be	10.	Protecting Functions	•••	27
changed within the scope of the	11.	Function of Operation Indicator	•••	30
specification without any consultation	12.	FAQ	•••	31
or advice.	13.	How to dispose	•••	38
Make sure that the final products	14.	Specifications	•••	41
equipped with FPSC MODULE and	15.	After Sales Service	•••	47
FPSC UNIT comply with local laws and	16.	Contact Us	•••	48
standards.				

<Contact>For product inquiries please contact:

(Hot Line)	SC Sales Depa	rtment		Business hours : 9:00 to17:00
	Telephone	+81-3-3663	3-8774	on weekdays in Japan time
	Facsimile	+81-3-3663	3-8642	
	Web Page	(TOP)	http://fpsc.twinbird.jp/	
		(FAQ)	https://fpsc.twinbird.jp/c/us	er_guide.php

<お問い合わせ> 製品に関するお問い合わせは以下にご連絡ください。

(専用窓口)	SC 営業部		(承り時間 平日:9:00~17:00)
	電話番号	03-3663-	-8774
	ファクシミリ	03-3663-	-8642
	ホームページ	(TOP)	http://fpsc.twinbird.jp/
		(FAQ)	https://fpsc.twinbird.jp/c/user_guide.php



1.製品の使用条件(免責事項) (1/2) $\omega \vec{r} \delta \vec{h} \delta \delta$

<u>1.製品使用上の注意事項</u>

製品は、取扱説明書(本書)に記載されていない条件(記載されている以外の条件)で使用しますと製品に異常 を生じることがあります。取扱説明書の記載事項を遵守の上、製品をご使用ください。万が一、製品が故障(異常 も含む)又は破損した場合には、速やかに使用を中止して弊社に修理をご依頼ください。弊社は取扱説明書に記 載された条件以外での使用にて生じた故障または損害などに関しては一切の責任を負いかねますのであらかじ めご了承ください。

1-1 用途にかかわる注意事項

当社製品は、直接生命・身体に危害を及ぼす可能性のある機器・システム(生命維持装置、人体に埋め込み使用するものなど)、もしくは多大な物的損害を発生させる恐れのある機器・システム(原子力制御システム、軍事機器など)に使用されることを意図しておらず、使用することはできません。

たとえ、意図しない用途に当社製品を使用したことによりお客様または第三者に損害が生じても、当社は一切その責任を負いません。

1-2 改造について

製品の分解・改造は行わないでください。分解・改造による故障又は損害に、弊社は一切の責任を負いかね ますので予めご了承ください。

1-3 他装置との組み合わせに係る注意事項

弊社が関与しない機器又はソフトウェアとの組み合わせによる誤動作などから生じた製品、ソフトウェア及び 関連する全てのものの故障又は損害に関しまして、弊社は一切の責任を負いかねますので予めご了承ください。

<u>2.付随的な損害</u>

製品の使用によって又は不使用によって生じた付随的な損害(事業の中断、事業利益の損失、逸失利益、他 機器の損傷など)に関して、弊社は一切の責任を負いかねますので予めご了承ください。

<u>3.瑕疵担保責任</u>

製品の瑕疵担保責任期間は、弊社から出荷日起草で18カ月です。瑕疵担保期間中に弊社の責による瑕疵が 発見された場合には、弊社はその修補の義務を負います。修補を実施したにも関わらず瑕疵が修正されず、そ の原因が弊社の責に帰すべき場合は、代替品との交換あるいは販売代金の変換を致します。弊社はその他の 賠償には応じられませんので、あらかじめご了承ください。なお、瑕疵担保期間であって、不具合の原因がお客 様の責に帰すべき場合には、原因追究にかかった直接費用及び修補に必要な費用をお客様にご請求させて頂 く場合がございます。

1.Disclaimer $(1/2)_{Please check before use.}$

1.Precautions for Use of Product

The product may break down if you do not use it in accordance with the manual. Use the product in accordance with the instructions provided in the Manual. If the product breaks down (including if it is not functioning normally) or is damaged, please stop using it immediately and contact our company to have it repaired. Our company does not bear any responsibility with respect to breakdowns or damages caused by using the product in a manner other than described in the Manual.

1-1 Precautions for Use

The product is neither intended nor authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems, surgical implantations etc.), or may cause serious property damages (nuclear reactor control systems, military equipment etc.).

You must check the quality grade of each product before using it in a particular application. You may not use any products for any application for which it is not intended. Our company shall not be in any way liable for any damages or losses in occurred by you or third parties arising from the use of any products for which the products is not intended by us.

1-2 Precautions for Modifications

Do not disassemble or modify the product. Our company does not bear any responsibility with respect to breakdowns or damages due to disassembling or modifying the product.

1-3 Precautions for Combining the Product with Other Equipment

Our company does not bear any responsibility with respect to all breakdowns or damages of product/equipment/software, including but not limited to those resulting from a malfunction which arises when the product is used in combination with software or equipment in which our company is not involved.

2. Indirect Damages

Our company does not bear any responsibility with respect to indirect damages or loss caused by the use of or inability to use the product (such as incidental and indirect damages or loss, lost earnings from business, and damage of other equipment).

3. Warranty against Defects

The warranty period is Eighteen (18) months. The warranty period begins from the date of shipment from TWINBIRD. Our company shall repair a defective product if our company is responsible for causing the defect and the defect is discovered within the warranty period. If our company is responsible for causing the defect but the defect cannot be repaired, our company shall either refund the purchase price of exchange the defective product for a new product. Our company will not provide compensation for defects in other ways. However, even the warranty period, our company will charge you with the costs of investigating the cause of a defect and the costs for repair if it is found that you were responsible for causing such defect.



(2/48)

1.製品の使用条件(免責事項) (2/2) $\omega \vec{J}$

<u>4.輸出関連法規の遵守</u>

製品及び関連する情報、技術、資料、またはこれらを使用して作成される物質又は役務を、以下に使用しない でください。

(1) 日本国内から、核兵器、生物兵器、化学兵器及びミサイル(以下「大量破壊兵器」という。)の開発、製造、使用若しくは貯蔵(以下「開発等」という。)又はその他の軍事用途を目的とする者への輸出(外国への持ち出し、商社等を通じた間接輸出、国内における非居住者への開示を含む)すること。

(2) 日本国外において、大量破壊兵器の開発等又はその他の軍事用途に自ら用いること、又はそのような用途を目的とする者へ再提供すること。

ただし、日本国の法令に基づいて武器の使用を認められた機関が用い、又は輸出する場合にはこの限りで はありません。また、上記用途以外を使用目的とする者へこれらを輸出する場合は、日本国の「外国為替 及び外国貿易法」、これにかかる政省令等及び関連する諸外国の法令等の定める手続きを遵守してくださ い。弊社は輸出に関しての一切の責任を負いかねますので予めご了承ください。また、本製品が規制対象 であるか否かについては、輸出の際にお問い合わせください。

5. 医療用途への使用

弊社製品は一般用途保冷向けの設計であり、医療用途認証を取得しておりません。 医療用途へのご使用の際はお客様にて医療用途認証を取得されることをお勧めいたします。

<u>6. その他の事項</u>

本免責事項に記載又は引用されている契約条件と、お客様と弊社との合意内容との間に齟齬がある場合に は、本免責事項に記載または引用されている契約条件が優先して適用されるものとします。ただし、お客様と弊 社の適法な権限ある代表者により署名または記名・捺印された契約文書が別途存在する場合には、当該契約 文書に記載された内容が優先して適用されるものといたします。



4. Compliance with Applicable Laws regarding Exports

Please do not use the product, or related information, technologies and materials, or goods and services made from the product, or related information, technologies (collectively, "Products") for the following purposes.

(1) Exporting the products from Japan (including taking the Products out of Japan, indirectly exporting the Products through trading agencies, and disclosing the Products to non-residents in Japan) to a person who intends or is likely to intend to use the Products for developing, manufacturing, using or storing (collectively, "Development") nuclear weapons, biological weapons, chemical weapons or missiles (collectively, "Weapons of Mass Destruction" or WMD") or other military purposes.

(2) Using the Products yourself for the purpose of Developing WMD or for other military purposed, or providing the Products to a person who have such purposes outside of Japan.

However, this shall not apply to institutions which have been given approval in accordance with Japanese laws and regulations regarding the use or exportation of the Products. If you export the Products, please comply with the procedures under the Foreign Exchange and Foreign Trade Act in Japan, applicable ordinances thereunder, and the laws and regulations of foreign countries. Our company does not bear any responsibility with respect to exports of the Products by you. If you intend to export the Products, please contact us to determine whether the product is subject to any regulations.

5. Medical Use

Our products don't have any certificate for medical use as they are designed for general use. When you will use our products for medical, we recommend that you should obtain certificates for medical by yourself.

6.Other Matters

When the provisions stipulated in this Exemption Clauses are discrepant from the agreements between you and our company, the provisions stipulated in this Exemption Clauses shall prevail. However, if you and our company have made the contracts by an instrument in writing signed by your and our company's duly authorized representatives, the provisions in the contracts between you and our company shall prevail.



(3/48)

2. 輸出規制について



スターリング冷凍機は以下の日本の輸出規制が適用されます。 日本から輸出される場合は、経済産業大臣の許可が必要です。

また、輸出先から再輸出する際は、その国の輸出規制に従って下さい。

該当項目:「光検出器の冷却器」

<貨物> ·輸出令別表1:10項(2)号 ·貨物等省令:第9条1項六号口(一)

くお問合せ先 > ツインバード工業株式会社 SC 営業部 Tel: 03-3663-8774 Fax: 03-3663-8642 〒103-0001 東京都中央区日本橋小伝馬町 14-4 ツインバード日本橋ゲートオフィス

なお、この適用は2020年9月現在であり、法令は改正されることがあります

2.Restriction of Export

Important

The following regulations shall apply to Stirling Cooler and permission for export by the Ministry of Economy, Trade and Industry of Japan is required before exporting Stirling coolers from Japan for abroad.

Foreign Exchange and Foreign Trade Law-section 1 of article 48.
Foreign Exchange and Foreign Trade Law-section 1 of article 67.
Export Trade Control Ordinance-section 2 of article 8.

If you wish to export our Products from Japan for abroad, please contact us prior to exporting.

< Contact >
TWINBIRD CORPORATION
SC Sales Department
Phone: +81-3-3663-8774 Facsimile: +81-3-3663-8642
Address: 14-4, Kodenma-cho, Nihonbashi, Chuo-ku, Tokyo, 103-0001, Japan

The above regulations were applied at the <u>September 2020</u>. Laws and regulations may be revised according to the legal revisions.



3. 安全上のご注意(1/3) & ずお守りください

製品および取扱説明書には、お使いになる人や他の人への危害、財産への損害を未然に防ぎ、 安全に正しくお使いいただくために、重要な内容を記載しています。次の内容(表示・図記号)をよく 理解してから本文をお読みになり、記載事項をお守りください。





3. Safety Notice (1/3) Please check before use.

Important indications in a product and the instruction manual are listed below to prevent harm to the

property and a person and other people spending, and to have you use it definitely safely. At first,

before use FPSC MODULE and FPSC UNIT, please check and read this manual, and after

<u>3. 安全</u> 」	<u> </u>	主意(2/3) 必ずお守りください	<u>3. Safet</u>	y Notice	e <u>(2/3)</u> Please check before use.
▲ 警告	\bigcirc	FPSC モジュールや FPSC ユニットの放熱フィンや基板の 部品は、運転中及び停止直後は高温になっていることが あります。素手で触わらないでください。火傷の恐れがあ ります。		\bigcirc	To avoid the danger of burns, do not touch the heat radiation fins and certain parts on DRIVE PCB with bare hands during or immediately after operation.
	禁止	FPSC モジュールや FPSC ユニットの吸熱部及びその周辺は、運転中及び停止直後は低温になっています。素手で触わらないでください。凍傷の恐れがあります。	Warning	Ban	To avoid the danger of frostbite, do not touch the cold side and its immediate surroundings with bare hands during or immediately after operation.
		FPSC モジュールや FPSC ユニットの吸熱部は薄いステ ンレス板で形成されており、内部は精密構造になってお りますので、熱交換器の取り付けの際など、吸熱部に強 い力を加えないでください。故障の原因となります。 FPSC 電源コードを強く引っ張らないでください。断線し、 故障の原因となります。			Failure of the FPSC MODULE and FPSC UNIT could result from subjecting the cold side to a strong force. Because FPSC MODULE and FPSC UNIT are made of thin stainless- steel sheet surrounding a precision structure. Do not put excessive strain on the FPSC power cords. It could cause damage to the wire and cause the FPSC
		運転中の製品に触れないでください。FPSC モジュール (SC-UG08)の場合は回転中のファンモーター、FPSC ユ ニット(SC-TG08)の場合はバランサーには絶対触れない でください。いずれも高速で運動しておりますので、ケガ の原因になります。ファンモーターやバランサー周辺には 保安部材等を設置し、運転中に触れられないような構造 をご用意ください。			MODULE and FPSC UNIT stop operating. Do not touch the product while driving. Do not touch the rotating fan motor for the FPSC MODULE (SC-UG08) or the balancer for the FPSC UNIT (SC-TG08). Since all exercise at high speed, it may cause injury. Install protection parts around the fan motor and balancer, and prepare a structure that cannot be touched during operation.
	① 強制	FPSCモジュール08(SC-UG08)とFPSCユニット08(SC- TG08)はDC24V専用です。DC12V、48VあるいはAC100 ~240V等、他の電圧では使用しないでください。故障の 原因となります。 各配線の極性を必ず守ってください。極性を間違えて配 線されると、製品の故障の原因となります。 0~35℃の環境でご使用ください。これ以外ですと、故障		Compulsion	FPSC MODULE 08(SC-UG08) FPSC UNIT 08(SC-TG08)must be used with 24 V DC power source.Internal damagecan result from operating these products directly with anyinput voltage other than 24 V DC.Make sure that the polarity of each wire. Incorrect polaritywiring will cause product failure.The FPSC MODULE 08(SC-UG08) and FPSC UNIT 08(SC-
		の原因となります。 吸熱部の許容温度範囲は-100~-20°Cです。冷えすぎな いよう吸熱量を調節してください。また、ヒーターなどで加 熱しないでください。故障の原因となります。 指定された定格の器具、装置、工具を使ってください。 放熱フィンがほこり等により目詰まりしないようにご使用く ださい。			TG08) are designed for use in ambient temperatures between 0 to 35°C The cold side of the products shall be maintained between -100 to -20°C. Internal damage could result from operating FPSC MODULE and FPSC UNIT outside this temperature range. Use specified ratings, equipment, tools and tools. Use caution to prevent the heat radiation fins from being filled by dust.



<u>3. 安全_</u>	<u> </u>	主意(3/3) 必ずお守りください	<u>3. Safet</u>	ty Notic	e(3/3) Please check before use.
▲注意		放熱フィンをお取り扱いの際は、ケガややけどにご注意く ださい。また、放熱フィンの変形、破損にご注意ください。			Use caution when handling the heat radiation fin assembly to prevent damage or injury. Inspect the Heat radiation fin assembly for deformity or breakage before use.
	強制	 駆動基板をお取扱いの際は、静電気やショート等に注意してください。 (A)使わないときは、導電袋に入れてください。 (B)基板を取り扱う際は、手首からアースを取る等、人体から静電気を取り除くことをお勧めします。 (C)裏面が金属に触れるとショートして電子部品が破損します。電源が切れていても静電気等で故障する場合があります。表面同様に裏面にも電子部品がついておりますので、ご注意ください。 完成機器における規格、法令等の適合性については貴社にてご確認願います。 FPSCモジュールやFPSCユニットの吸熱部及びその周辺は、霜や露がつかないように断熱してください。また、単体での動作確認などで霜や露が付着した場合は、運転を停止させた後にやわらかい布などでふき取ってください。着霜や結露は冷却能力の低下につながり、融けた霜や露がFPSC電源コードや内部の機構部品に流れ落ちると、電気回路がショートして故障したり、腐食の原因になったりしますので、十分ご注意ください。 FPSCモジュールやFPSCユニットから異常振動が発生したときは、出力速度設定(SW1)、または制御入出力端子(CN8)への制御入力を調整してFPSCへの出力を抑えてください。それでも異音が発生する場合は弊社までお問い合わせください 	Caution	Compulsion	 Although the DRIVE PCB is protected against reverse connection, use caution to prevent static electricity or short circuit. (A) Keep the PCB in the static shielding bag before use. (B) Discharge static electricity from your body using antistatic wrist band, etc. (C) Electric parts may be damaged by the short circuit when the backside of the PCB touches metal parts. It may be damaged by static electricity. Use caution to avoid damage of backside electric parts. Please confirm compliance with respective laws regulations and standards of finished device shall be confirmed by users. Apply thermal insulation around cold side to prevent frost and dew condensation. If conditions require that you need to operate the FPSC MODULE or FPSC UNIT without thermal insulation, the cold side may develop a coating frost or water. If this occurs, please clean the cold side with a soft cloth. Having frost or condensation on the cold side surface can cause an apparent reduction of cooling performance. Also, if water drips down on a FPSC power cord or inner mechanical parts as it defrosts, it could cause a short circuit or corrosion. Reduce Rump up speed change(SW1) or Control Input at "Signal input output port(CN8) "of the FPSC MODULE and FPSC UNIT, when abnormal vibration generated from inside the pressure vessel. Please contact TWINBIRD if the reducing them does not eliminate abnormal vibration.
		(廃棄の場合) FPSC 内部に高圧のヘリウムガスが封入されています。 「13.廃棄のしかた」に従い、必要な用具を準備し製品内部 のヘリウムガスを抜いてから、各国/地域の法律および規			(Disposing FPSC MODULE and FPSC UNIT) High pressure helium gas is sealed inside the FPSC. Prepare necessary tools and remove helium gas from the inside of the product according to "13. Disposal procedure", and dispose of in
	【ご注意】	制に従って廃棄してください。 本製品の仕様を満足する範囲において、性能向上のた め、部品など一部を連絡なしに変更する場合があります。		[Notice]	accordance with the laws and regulations of each country / region. To improve the performance, the FPSC and associated parts may be changed within the scope of the specification without any consultation or advice.

(7/48)

4.セット内容 開封時に必ずご確認ください。

【ご注意ください】

FPSC モジュール 08(SC-UG08S/N)、FPSC ユニット 08(SC-TG08S/N)の両機種ともに、 駆動基板と直流電源(DC24V)を繋ぐための<u>電源電線は同梱していません</u>。詳しくは「8.配 線」の内容をご確認ください。

4.1 セット内容

SC-UG08 TYPE S・・・振動検出器付き/ N・・・振動検出器なし

FPSC ユニットを保護する樹脂ケース(以下、モジュールケース)に収納したモデルです。 モジュールケースは FPSC ユニットとの①免振機構、②空冷機構で構成されており、FPSC ユニット と駆動基板との結線も完了しております。



SC-TG08 TYPE S・・・振動検出器付き/ N・・・振動検出器なし

FPSC ユニットと駆動基板だけで構成した基本モデルです。別途 FPSC の運転に必要な①免振機構 や②空冷機構をご用意ください(→6.設置)。お使いの前に、必ずユニットの固定や結線をしてください。





駆動基板 ••••1



取扱説明書(本書)・・・・1

4. Set Components Please check before use

[Notice]

FPSC MODULE 08 (SC-UG08S/N) and FPSC UNIT 08 (SC-TG08S/N) models <u>do not</u> <u>include a power supply cord</u> for connecting DRIVE PCB and DC power supply(24VDC). Follow "8. Wiring".

4.1 Set Components

SC-UG08 TYPE S… with Vibration Detector / N… No detector

This model is housed in a resin case (hereinafter referred to as the module case) that protects the FPSC UNIT. The module case consists of (1) vibration isolation mechanism and (2) air cooling mechanism with the FPSC UNIT, and the wiring between the FPSC UNIT and the DRIVE PCB are also connected.

FPSC MODULE 08 ····1



SC-TG08

TYPE S… with Vibration Detector / N … No detector

This is a basic model consisting only of the FPSC UNIT and DRIVE PCB. Prepare (1) vibration isolation mechanism and (2) air cooling mechanism with the FPSC UNIT required for FPSC operation. Be sure to fix or connect the FPSC UNIT before using.

FPSC UNIT 08 ···1

DRIVE PCB····1

User's Manual····1 (This booklet)

User's Manual ••••1









(8/48)

<u>5. 各部の機能と名称①SC-UG08S/N</u>

内部に FPSC ユニット 08(SC-TG08S/N)が収納されています。

単位[mm]



5. Parts Name and Function 1SC-UG08S/N

FPSC UNIT 08(SC-TG08S/N) is housed inside the case.

Unit[mm]



リインバード工業株式会社

5. 各部の機能と名称②SC-TG08S/N



5. Parts Name and Function 2 SC-TG08S/N

Unit[mm]





(11/48)

6. 設置(1/7)①SC-UG08 ご使用上の重要なポイントです。 【6-1①】設置条件・方法・・・本製品は天地自由な姿勢でお使いいただけますが、本書で

は推奨姿勢「吸熱部を上に向けた垂直姿勢」での使用条件で説明します。

①製品の設置に必要な環境の確認

使用される場所が、右記の環境条件を満たしてい ・周囲温度:0~35℃(凍結のないこと) ることをご確認ください。

【注意】周囲温度や吸気温度が 25℃を超える環境 ・雰囲気:腐食性、引火性ガス、塵埃が無いこと。 では本製品が持つ本来の冷却能力が十分に引き 出せなくなる場合があります。

②製品の固定

 ・放熱、配線経路の確保のため、製品周辺は周囲
 200mm四方の空間/平面を確保してください。

 ・製品下部に4か所のネジ穴(ズレ防止用)を用意 しています。 推奨ネジ:プラスチック用 Pまたは Bタイトネジ

ネジ寸法:4x10mm

締め付けトルク:0.58-0.68N·m(6-7kgf·cm)

 ・設置個所に対して、本製品を確実に固定できる 部品を別途ご用意ください。

【注意】吸熱部だけを掴み、全体を保持しないでく ださい。本体に無理な力が加わり、変形等による 故障や振動、異音発生の原因になります。

③振動の伝達抑制

・SC-UG08(FPSC モジュール 08)には、SC-TG08 (FPSC ユニット 08)にも搭載されているバランサー だけでなく、モジュールケース内部に FPSC ユニッ トからの振動を外部に伝えないための免振機構が 組み込まれています。

製品からの振動を更に減衰させたい/伝えたくない 場合は、製品を固定した箇所の間に防振用の部 品を設置してください。



・周囲湿度:0~90%(結露のないこと)





6.Installation (1/7) 1SC-UG08 Important points in use.

[6-1(1)]Installation conditions and method Although this product can be used in any orientation, it will be explained in this document under the usage condition with the "vertical orientation with the heat radiation fin facing upward" as recommended posture.

(**Confirming the environment required for** (Environmental condition)

product installation

Make sure that the location used meets the Humidity: 0 to 90% (without condensation) environmental conditions listed on the right. [Note] If the temperature of ambient or intake air exceeds 25 °C, the product's inherent cooling performance may not be sufficient.

•Secure a space / plane around 200mm around

the product to ensure heat radiation and wiring

Recommended screw: For plastic P or B tight

Tightening torque: 0.58-0.68 Nm (6-7kgf · cm)

product securely to the installation location.

vibration or abnormal noise due to deformation.

• In addition to the balancer mounted on

SC-TG08 (FPSC UNIT 08), SC-UG08 (FPSC

the FPSC UNIT to outside of the module

If you want to more dampen / not transfer the

vibration of the product, install vibration isolation parts between the fixed parts of the product.

MODULE 08) has vibration isolation mechanism

(2) Fixing the product (for SC-UG08)

at the bottom of the product.

Screw size: 4x10mm

③Use of shock absorbers

case.

Temperature: 0 to 35 ° C (no freezing) No corrosive gas, no flammable gas, no dust.







TWINBIRD CORPORATION

(12/48)

6. 設置(2/7) ②SC-TG08 ご使用上の重要なポイントです。 【6-1②】設置条件・方法・・・本製品は天地自由な姿勢でお使いいただけますが、本書で は推奨姿勢「吸熱部を上に向けた垂直姿勢」での使用条件で説明します。

①製品の固定

・放熱、配線経路の確保のため、製品周辺は周囲 200mm四方の空間/平面を確保してください。 ・製品側面に3か所のナットが溶接してあります。 設置個所に対して、本製品を確実に固定できる 部品を別途ご用意ください。

ナット仕様:M8x深さ6mm 並目用 SUS(A2-70) 締め付けトルク:13.2Nm(13kgf·cm)

【注意】

・製品下端のバランサーからは10mm以上の距 離を確保してください。(動作中、バランサーが動 きます)。

・本体側面の銅パイプに力を加えないでください。 ・銅パイプには保護を設けて下さい。内部のHeガ スが漏れて故障の原因になります。



②振動の伝達抑制

・SC-TG08(FPSC ユニット)は、吸熱部の反対側に 振動低減用の「バランサー」を搭載していますが、 このバランサーだけでは、製品が発生する振動を 全て吸収/減衰することができません。

吸収しきれなかった振動が外部に伝わると、貴 社製品を振動させることになり、 騒音や異常振動 の原因となります。

外部へ振動が伝わらないようにするためには、 右図の様に、貴社製品とFPSC ユニットとの間に防 振用の部品を取り付けてお使いください。



6.Installation (2/7) 2SC-TG08 Important points in use.

[6-12]Installation conditions and method Although this product can be used in any orientation, it will be explained in this document under the usage condition with the "vertical orientation with the heat radiation fin facing upward" as recommended posture.

(1)Fixing the product

• Ensure a space / plane of 200 mm square around the product to ensure heat radiation and wiring routes

 3 nuts are welded to the side of the product. Nut specification: For M8 x 6 mm Coarse thread Prepare separately the part which can fix this product securely to the installation location. Recommended screw: M8x6mm SUS(A2-70) Tightening torque: 13.2Nm (132kgf · cm)

[Caution!]

 Secure a distance of 10 mm or more from the balancer at the bottom of the product. (In operation. the balancer moves) •Do not apply force to the copper pipe on the side of the main unit. It is necessary to prepare protection for the copper pipe. The internal He gas may leak and cause a failure.

2Use of shock absorbers

•SC-TG08 (FPSC UNIT) is equipped with a "Balancer" for absorbing vibration on the opposite side of the heat absorbing part, but this balancer alone cannot absorb / attenuate all the vibrations generated by the product.

If the vibration that cannot be absorbed is transmitted to the outside, it will make your product vibrate and cause noise and abnormal vibration.

In order to prevent the transmission of vibration to the outside, as shown in the figure on the right. please use the parts for vibration isolation between your product and FPSC UNIT.

TWINBIRD CORPORATION







リインバード工業株式会社

6.設置(3/7)ご使用/設計上の重要なポイントです。

【6-2】冷却対象との接続

①冷却対象との接続

・「冷熱を伝える部材と弊社製品の吸熱部の間(右 図太黒線部)を密着させること」が、本製品の冷却 能力を最大限に引き出すポイントです。密着させる 面に、ゴミ、凹凸、数μmのすき間でもあると、冷 却能力を大幅に悪化させる原因となります。熱伝 導グリスや接着剤の充填剤を使うことで、これらす き間による熱伝達の悪化を抑えることができます。 ・「冷熱を伝える部材」として本製品に最適化され た SC-CA04「コールドサイドアダプター(別売)」を ご用意しています。



密着の違いによる熱伝達のイメージ 及び充填剤の塗布エリア 推奨接着剤:1225B(スリーボンド社)



・吸熱部に「冷熱を伝える部材」を装着した後、装着部や本体だけを持ってねじったり、製品全体を 保持させたりしないでください。密着を良くしようと 必要以上に吸熱部を強く締めることは、本製品動 作の悪化につながります

②具体的な取り付け位置(SC-UG08/TG08 共通)



6.Installation (3/7) Important points in use.

[6-2]Securing connection with cooling target

① Connection to cooling target

• "Fine fitting between the heat transfer parts and the cold side of the product without making a gap" is the point to maximize the cooling capacity of this product. However, if you want to tighten the heat radiation fins for tightness, the operation of our products will be degraded. Even a gap of several micro meter due to processing marks at the joints can cause significant deterioration of the cooling capacity. The use of thermal grease and adhesive fillers serves to minimize the deterioration of cooling capacity due to gaps.

•Recommended heat transfer parts is <u>SC-CA04</u> [Cold side Adaptor]as optional accessory.



<u>Cold side adapter wearing Condition</u> <u>And Adhesive application area</u> Recommended Glue: 1225B (Three Bond)



•After attaching the " the heat transfer parts " to the cold side part, do not hold or twist the attachment part or the main body alone or hold the entire product.

2 Specific mounting position (common to SC-UG08 / TG08)



リインバード工業株式会社 TWINBIRD CORPORATION

(14/48)

【注意!】FPSC ユニット、駆動基板は放熱が必要です。密閉構造にしないでください。

【6-3】吸排気経路の確保

<u>①FPSC ユニット</u>

・FPSC 製品は、放熱部と FPSC 本体の温度を低く 維持することで、冷却性能を高く維持することが できます。また、放熱部は 60℃以上に過熱した まま運転することはできません。駆動基板による 保護機能が働き、製品の運転を停止します。
・FPSC ユニット 08(SC-TG08)は、FPSC モジュー ル 08(SC-UG08)のような排熱構造がありませ ん。本製品の冷却能力を引出し、使用温度範囲 に維持するため、必要な排熱構造部品(ファンモ ーター等)を別途用意してください。



②駆動基板

- ・駆動基板は直置きせず、基板の4か所にある固定用の穴を利用し、Φ4mmのネジを使って固定してください。
- ・駆動基板は発熱する部品を多数使用しています。基板上の部品の過熱を防ぐため、密閉構造にはしないでください。
- ・駆動基板の設置には以下の平面、および上下空 間を確保してください。

外周から 15mm 以上(160x105mm)の平面

上面:基板面から 60mm以上の空間

下面:基板面から 20mm 以上の空間

・安全のため、基板上に配線が重ならないように処 置してください。

・基板上の部品過熱を防ぐため、基板に新鮮な外 気が当たるようにしてください。

・基板を設置する向きは、右図のような「水平置き」 や「垂直置き」にされることを推奨します。基板中 央に並ぶ黒い放熱部品(ヒートシンク)からの熱を 逃がしやすくするためです。





リインバード工業株式会社

6.Installation (4/7) Important points in use.

[Caution!]The FPSC UNIT and DRIVE PCB need heat radiation. Do not use an enclosed structure.

[6-3]Air intake and exhaust root ①FPSC UNIT

The FPSC UNIT and the area around DRIVE PCB should be designed to maintain ventilation and maintain the same temperature as the ambient temperature while securing a method of intake / exhaust by installing a fan if necessary.
Overheating of the board may cause failure.
FPSC UNIT 08 (SC-TG08) does not include air cooling mechanism such as FPSC MODULE 08 (SC-UG08). In order to draw out the cooling capacity of this product and maintain it in the operating temperature range, prepare the necessary heat removal structural parts (fan motor etc.) separately.



2DRIVE PCB

-Do not place the DRIVE PCB directly, but use four fixing holes on the board, to fix using a $\Phi4$ mm screw.

• The DRIVE PCB uses many components that generate heat. To prevent overheating of parts on the board, do not use a sealed structure.

• Please secure the following plane and upper and lower space for the installation of DRIVE PCB.

Flater Plain Space:DRIVE PCB+15mm or more (160x105mm). Upper Space : 60 mm or more from DRIVE PCB surface Bottom Space : 20 mm or more from DRIVE PCB surface

• For safety make sure wiring shall not overlap the DRIVE PCB.

• Make sure DRIVE PCB shall be exposed to open air to prevent overheating.

• It is recommended that the posture of the DRIVE PCB be "horizontally placed" or "vertically placed" as shown in the right figure. The heat flow the back heat radiation parts can be easily radiated with those postures.







6.設置(5/7) ご使用/設計上の重要なポイントです。

【6-3】吸排気経路の確保(続き)

③吸気口(放熱部)周辺の空間の確保

・吸気ロに装着されている放熱フィンは、外部 から直接触れることができないよう設計してく ださい。(触れることにより、部品の変形に伴う 性能の劣化や、やけどの恐れがあります)

・FPSC本体に近い吸気ロを塞ぐような断熱材の設定はしないでください。(断熱材を装着する場合も、右図のように、吸気ロ上部45°の範囲は空間をとるように設計してください。)

④排気循環の防止

- ・排気口から先は空間 50mm 以上を確保し、 通気を妨げるものを置かないでください。
- ・保護部品をファンモーター前に設定する時、 保護部品のない状態と比較して排熱部の 温度がご使用環境下で高くならないよう、 形状や位置を選んでください。

【注意】

・周囲温度や吸気温度が 25℃を超えると、製 品が本来持つ冷却能力が十分に引き出せな くなる場合があります。

・吸気/排気経路は完全に分離してください。

・ファンモーターからの排気や、基板からの熱 を本製品の吸気側に循環(エアサイクル)させ ないでください。製品の過熱による異常停止、 能力低下等、故障の原因となります。

・製品の安定動作と冷却能力維持のため、
 新鮮な空気を駆動基板と吸気口に導く経路を
 確保してください。放熱部が 60℃を超えると異常と判断し、安全を確保し製品を保護するため、運転を自動的に停止します。





6.Installation (5/7) Important points in use.

[6-3]Securing air intake / exhaust route(Cont.)

3 Securing space around the air intake(heat radiation)

• Design the radiation fin attached to the air intake so that it cannot be touched directly from the outside. (There is a risk of deterioration of performance caused by deformation of parts or burns by touching)

•Do not set the heat insulating material to block the air intake close to the FPSC body. (Even when installing the insulation, please design to take a space in the upper 45 $^{\circ}$ range of the air intake as shown in the right figure.)

(4)Exhaust circulation prevention

•Secure a space of 50 mm or more from the exhaust mouth and do not place anything that block air flow.

•When installing the finger guard, set the parts and position so that the warm side temperature and the temperature of the warm side section will not become higher compared to the condition without the finger guard in the operating environment.

[Caution]

•When the temperature of ambient or intake air exceeds 25° C, the product's inherent cooling capacity may not be fully realized.

•Separate the intake / exhaust route completely.

•Do not recirculate air from the fan motor or heat from the DRIVE PCB to the air intake side of this product. Overheating of the product may cause an abnormal stop, cooling capacity deterioration, or other problems. For the stable operation of the product and the maintenance of the cooling capacity, secure the path that leads fresh air to the DRIVE PCB and the air intake. <u>When the heat</u> radiation fin exceeds 60°C, it is judged as abnormal and operation is automatically stopped to ensure safety and protect the product.





Make sure that the finger guard does not adversely affect the product temperature before installing





6.設置(6/7) ご使用/設計上の重要なポイントです。

【6-4】断熱設計 (1)吸熱部の断熱設計(結露防止)

吸熱部と排熱部の間で、温度が周囲より低く

なる部分(右図破線部)を断熱材で覆い、霜や 露が着かないように断熱してください。

 ・断熱材の厚みが不足している箇所、断熱材 に隙間のある箇所に霜や結露が発生すること があります。

 ・霜や結露が発生した場合でも、製品内部や 基板にかからないようにしてください。

②結露による水分や氷

 ・結露しやすい箇所は断熱対策を十分に行っ てください。

・製品の使用条件・環境によっては、長時間 運転した場合、表面(特に吸熱部およびその 近傍)に「結露による水分や氷」が発生するこ とがあります。(右図参照)

 吸熱部の結露が氷塊や液滴まで大きくなっ ていると、運転停止後に溶けて、製品内部に 流れ込み、故障や機体の劣化の原因となりま す。製品本体内に入り込まないよう、処置をお 願いします。





(結露しやすい箇所) ●吸熱部、およびその近傍

(発生しやすい条件) ●長期間の運転、及び運転後 ●低温部の断熱不足 ●常温に戻る時間が短い ●使用環境の湿度が高い 等

6.Installation Before Use(6/7)

Important points in use.

[6-4]Thermal insulation design (1)Heat insulation design of th cold side

(Condensation prevention)

· Cover the area where the temperature is lower than the surrounding area (broken line in the right figure) between the cold side and warm side with heat insulation material, and insulate so that frost and dew do not get on.

 Frost or condensation may occur in areas where the thickness of the insulation is insufficient or where there is a gap in the insulation.

· Even if frost or condensation occurs, do not get in the product or on the DRIVE PCB

2 Moisture and ice due to condensation

•In areas where condensation is likely to occur. take adequate insulation measures.

· Depending on the product usage conditions and environment, "moisture or ice due to condensation" may be generated on the surface (especially at the heat absorption area and its vicinity).

·Condensation on the cold side surface grow up to the ice blocks or droplets. They will flow out as water after the product shutdown. Avoid to enter them into the product body. Ingress of condensation water may cause failure or deterioration of the machine.





(Point where condensation is likely to occur) The cold side part and its neighborhood

(Conditions that easily occur)

- During or after a long period of operation
- Insufficient insulation of low temperature parts
- Time to return to normal temperature is short
- The humidity of the environment is high,

etc.



(17/48)

6.設置(7/7) ご使用/設計上の重要なポイントです。

【6-5】メンテナンス

<u>放熱部や基板上からのゴミの除去</u>

・ゴミやホコリの付着は、冷凍能力の低下や 異常加熱による製品停止の原因となります。 吸気エリアにゴミやホコリが侵入しないよう、 装置にはメンテナンス可能なフィルター等をご 用意いただき、定期的なメンテナンス(清掃) を行える設計を行ってください。

・放熱部に付着したゴミは、柔らかいブラシ等 で取り除いてください。

・吸気部にフィルター等を直接設置しないでく ださい。ファンモーターによる吸気が不足し、 放熱性能が悪くなり、冷却性能が低下するだ けでなく、製品の異常加熱による製品停止 (<u>60℃を超えると異常と判断し緊急停止しま</u> <u>す)</u>の原因となります。

・吸気ロや排気ロ近傍に通気を阻害する遮蔽 物等を配置しないでください。

【ゴミやホコリの付着で性能が低下する場所】



6.Installation Before Use (7/7) Important points in use.

[6-5]Maintenance

Removal of dust from the product

• The adhesion of dust and dirt may cause the product to stop due to a decrease in cooling capacity or abnormal heating. In order to prevent dust and dirt from entering the air intake area, prepare a filter that can be maintained on the device, and design it so that periodic maintenance (cleaning) can be performed.

• Do not install a filter, etc. directly on the air intake. Not only does the intake by the fan motor become insufficient, the heat radiation performance deteriorates, the cooling capacity declines, but it also causes abnormal heating of the product and emergency stop of operation. (it will be judged as abnormal when it exceeds 60°C and emergency stop)

•Do not place a shield, etc. that blocks ventilation to near the intake or exhaust vent .

[Where the performance is degraded by the adhesion of dust and dirt]





7.準備 事前に必要な工具/器具/配線部品をご用意ください。

【7.1 用意するもの】

【工具】

・プラスビット付トルクドライバー(指定トルク0.8-1.2N・m Max) 電源入力端子(CN1)/本体共用 ・・・ 1 静電気防止作業手袋 ••• 1 【器具】 (1) 直流電源 【直流電源】 ・定格電圧 DC24V 定格 DC24V ・定格電流≥6A(RMS)(最大ピーク電流 10A 以上)*1 *1: ピーク電流 10A 以上の電源をご使用ください。 定格電流 6A(RMS)以上 容量が足りないと、電源側の保護装置が働き、 ピーク電流 10A以上 不意に製品を急停止させる恐れがあります。 (2)1-5V 又は 4-20mA の出力がある装置 1-5V の場合 例·温調器 電圧(+)→ Ch.1 駆動基板の制御入出力端子(CN8)の 【調節器】 CN8 電圧(-)→ Ch.2 Ch.1.2(1-5V)、または Ch.3.4(4-20mA)に 1-5V 又は $\overline{}$ 接続して使います。 4-20mA 4-20mA の場合 冷却対象箇所の温度を検知するセンサーを 電流(+)→ Ch.3 装着してお使いください。 ()()【注意】0-10V、1-10V 出力の調節器は使わないでください。 電流(-)→ Ch.4 5Vを超える電圧の印加は、基板故障の原因となります。 CN8 の Ch.5-9 間に接続 (3)AWG20-24 電線付のスイッチング装置 CLOSE → "動作 ON" 制御入出力端子(CN8)の Ch.5-9 間に繋ぎ、 OPEN → "動作 OFF" 開閉することで製品を ON/OFF できます。

【7.2 推奨機種】

項目	推奨機種	品番	仕様
直流電源	デンセイラムダ製ユニット電源	ZWS150PF-24/SA	ピーク電流 12A
	TDK ラムダ製ユニット電源	ZWS150BP-24/A	要外部空冷
温調器	パナソニック製温度調節器	AKT4B113100	汎用機種
(1-5V/4-20mA)	東邦電子製温度調節計	TTM-205-Q-FN	出力制限可能
	横河電機製プログラム調節計	UP55A/UP35A	出力設定可能
温度センサー	熱電対	K 型、T 型、など	シース型を推奨
	測温抵抗体(RTD)	PT100	
	直流電源 温調器 (1-5V/4-20mA)	直流電源 デンセイラムダ製ユニット電源 面流電源 デンセイラムダ製ユニット電源 TDK ラムダ製ユニット電源 アンセイラムダ製ユニット電源 温調器 パナソニック製温度調節器 (1-5V/4-20mA) 東邦電子製温度調節計 横河電機製プログラム調節計 温度センサー 熱電対	広市電源デンセイラムダ製ユニット電源ZWS150PF-24/SA直流電源デンセイラムダ製ユニット電源ZWS150BP-24/A温調器パナソニック製温度調節器AKT4B113100(1-5V/4-20mA)東邦電子製温度調節計TTM-205-Q-FN横河電機製プログラム調節計UP55A/UP35A温度センサー熱電対K型、T型、など

*2020年9月現在。上記機器は変更される場合があります。

7. Preparation. Prepare tools / equipment / wiring parts in advance.

[7.1 Preparing in advance]

[Tools]

•Torque driver with plus bit (specified torque 0.8-1.2 N · m Max) ••• 1

[DC power supply]

 $DC24V \geq 6A(RMS)$

Τо

CN8

Max. Peak Current≥10A

Use "1−5V"

Voltage(+) Ch.1

Voltage(-) Ch.2

or

Use "4-20mA"

Current(+) Ch.3

Current(-) Ch.4

Connect between Ch5-9(CN8)

CLOSE \rightarrow "ON"

OPEN \rightarrow "OFF"

*Requirement

 Antistatic work gloves ••• 1

[Equipment]

(1) DC power supply

Rating Voltage:DC24V

•Rating Current: $\geq 6A(RMS)(Max, Peak Current \geq 10A)^{*1}$

*1: Use a power supply with a peak current 10A or more. If the capacity is insufficient, the protection device on the power supply side may stop the product suddenly.

(2) Device with an output of 1-5 V or 4-20 mA

Ex) Temperature controller

Use by connecting to Ch.1.2(1-5V) or Ch.3.4(4-20mA) [Device] of Signal input output port (CN8) on the DRIVE PCB. 1-5V Attach the temperature sensor to the target point 4-20mA for detecting the temperature. \bigcirc [Caution] Do not use a device with 0-10 V, 1-10 V output regulator. Applying a voltage higher than 5 V may cause DRIVE PCB failure.

- (3) Switching device with AWG 20-24 wire Connect between Ch.5-9 of Signal input output port (CN8) for ON/OFF switching
- device. [7.2 Recommended Device & Equipment]

		• • –		
	Items	Manufacturer	Model Number	Specification
1	DC power	TDK Lambda	ZWS150PF-24/SA	Peak Current
	supply		ZWS150BP-24/A	≧12A
2	Temperature	Panasonic	AKT4B113100	General purpose
	Controller	TOHO ELECTRONICS INC.	TTM-205-Q-FN	Output restriction is possible
	(1-5V/4-20mA)	Yokogawa	UP55A/UP35A	Output setting is possible
3	Temperature	Thermocouple	TYPE T or K	Recommended
	sensor	RTD	PT100	Sheath type

*As of September, 2020. The above equipment may be changed.



TWINBIRD CORPORATION

(19/48)

8. 配線(1/4) 基板の表示に沿って配線してください。

8.1 配線用部品の説明と仕様

①駆動基板 電源入力端子 (CN1)用





【推奨配線部品の仕様】

- ●圧着端子 ···絶縁被覆付き丸端子 ICTV1.25-3.5M
- ●電線サイズ···AWG18 以上。*
- *「定格電流 6Arms/ピーク電流 10A」に適合できる電線サイズを選定してください。
- ●裸銅線では使用しないでください。スズメッキ付き圧着端子を必ず使ってください。
- 【電源入力端子への取り付け方】

【注意】 ・電源入力端子(CN1)の(+)(-)の極性があります。正しく取り付けてください。 ・スズメッキ付き圧着端子を正しく取り付けてください。

・DC24V 専用です。DC12V では駆動できません。

- ・必ずトルクドライバーを使い、指定トルクを守って適切に固定してください。
- ●取り付け条件

指定トルク:0.8-1.2N•m

 ・端子部のネジを回すと端子板が持ち上がり、端子が装着できるようになります。(ネジを回し続けても、端子板は外れません)
 ・持ち上がった端子板の間(→部)に圧着端子を挿入し、 指定トルクで確実に締めてください。

*上記指定トルクを超えて締めると、端子台に負荷がかかり 端子台の破損の原因となります。



<u>8.Wiring (1/4)</u> Each wire has polarity make sure to install it correctly.

8.1 Wiring parts description and specifications

<u> 1)Power source input terminal(CN1)</u>





[Specification of the recommended parts]

- ●Solderless Terminal · · · Insulated Ring Terminals ICTV1.25-3.5M
- ●Wire size · · · AWG18 or more*
 - *Select a wire size that can meet the "6 Amps rated current / 10 A peak current".
- DO NOT use with bare copper wire. Solderless Terminal with tin plating is necessary.
- [How to connect to Power source input terminal (CN1)]
- [Caution!] There is the (+) (−) polarity of the Power source input terminal (CN1).
 Install the solderless terminal with tin plating correctly.
 •DC24V only. It cannot drive with DC12V.
 Loosen Tighten
 •Use the torque drive which be able to tighten by
 the specified torque and fix properly
 •Tighten
 - Tightening Condition
 Specified torque: 0.8-1.2Nm
 - Turning the terminal screw lifts the terminal board so that the terminal can be attached. (The terminal board does not come off even if you keep turning the screw)
 - Insert a crimp terminal between the raised terminal boards
 (→ part) and tighten it securely to the specified torque.
 - * If the torque specified above is tightened, the terminal block will be loaded, which may cause damage to the terminal block

Insert the crimp terminal into the gap (\rightarrow) and tighten

インバード工業株式会社 TWINBIRD CORPORATION

(20/48)

8. 配線(2/4) 各配線には極性があります。下記に従い正しく取り付けてください。

②制御入出力端子(CN8)



【注意】 ・<u>Ch1-10 まで、すべての端子に極性があります。正しく配線してください。</u> ・Ch.9-10 の間は絶対に短絡しないでください。駆動基板が故障します。 ・Ch.1-2 間は 5V を超える電圧、Ch.3-4 間は 20mA を超える電流を流さないでください。

【推奨配線部品仕様】

- ●推奨<u>電線種類とサイズ</u> 単線d: Ф0.4-Ф0.8mm(AWG26-20) より線d: 0.2~0.5 mm² (AWG24-20)
- ●絶縁被覆外径 D:最大 φ 1.8mm

●剥き線長さL:8.5-9.5mm



(結線手順)

- ・端子台の上にあるボタンを押しながら、 上記のように加工した電線を挿入します。
- ・絶縁被覆が入るまで押し込みます。
- ボタンを離し結線/固定します。
- ・結線後は、軽く引いて確実に固定されている ことを確認してください。
- ・固定された状態で、端子台から電線が 露出していないことを確認してください。

余分な銅線を露出させたり、芯線がはみ出たりしな いように電線を加工してください。加工が不十分だ と、隣接端子と短絡の恐れがあります。





リインバード工業株式会社

8.Wiring (2/4) Each wire has polarity. Make sure to install it correctly.

②Signal input output port(CN8)



[Caution!]

•All terminals have polarity up to Ch1-10. Make sure that the wire connection is correct. •Never short circuit between Ch. 9-10. The DRIVE PCB breaks down.

Do not apply a voltage exceeding 5 V between Ch.1-2 and a current exceeding 20 mA between Ch.3-4.

- [Specification of the recommended parts]
- Recommended wire type and size
 Solid Wire d: Φ0.4-Φ0.8mm (AWG26-20)
 Standard Wire d: 0.2~0.5 mm² (AWG24-20)



●Insulation outside diameter D: ∲1.8mm Max. ●Strip Length L:8.5-9.5mm

(Connecting Procedure)

- •While pressing the button on the terminal block,
- insert the wire processed as above image.
- •Push in until the insulation coating is inserted.
- •Release the button and fix the connection.
- After wiring, pull lightly to make sure that the cable is securely fixed.
- Make sure that the wires are not exposed from the terminal block while fixed.

Process the wire so that the excess copper wire is not exposed or the core wire does not stick out. Insufficient processing may cause a short circuit with adjacent terminals.

TWINBIRD CORPORATION



Securely insert to the insulation part.



8. 配線(3/4) ① SC-UG08S/N AER線には極性があります。

<u>8.2 結線例①</u>

下記実線部を配線してください。

(SC-UG08S/N···CN2、3、6 接続済み。TYPE S は CN5 も接続済です。)
 *配線/接続時は、必ず各器具の電源をOFFにしてから作業してください。
 *安全と基板保護のため、静電気除去手袋をお使いください。



<u>8.Wiring (3/4)</u> ①SC-UG08S/N

8.2 Example of Wiring Connection(1)

It is necessary to wire the following solid line part.

(SC-UG08S/N: CN2, 3, 6 connected in advance. TYPE S: CN5 connected in advance, too.)

Each wire has polarity.

* When wiring / connecting, be sure to turn off the power of each device before starting work.

* Use antistatic gloves for your safety and for protecting DRIVE PCB.





TWINBIRD CORPORATION

(22/48)

8. 配線(4/4) ② SC-TG08S/N ARRA LIAME MANUAL SCIENCE SC

<u>8.2 結線例</u>②

下記実線部を配線してください。

【注意】SC-TG08/Nにはファンモーター、モジュールケースは同梱されておりません。 お客様にて強制排気用のファンや吸排気経路の設計を行った上、設置してください。



8.Wiring (4/4) 2SC-TG08S/N Each wire has polarity.

8.2 Example of Wiring Connection 2

It is necessary to wire the following solid line part.

[Notice] The fan motor and MODULE CASE are not bundled with SC-TG08S/N. Design Intake and exhaust path and prepare a fan motor for forced exhaust, as shown in the figure below.



リインバード工業株式会社

TWINBIRD CORPORATION

(23/48)

9. 使いかた(1/3) ①起動-終了

<u>*「8.2 結線例① SC-UG08S/N」を例に説明します。</u> <u>*制御入出力端子(CN8)Ch1-2 間に 5V(制御入力 100%)を印加しているものとします。</u>

9.1 使い始め~スタンバイ~運転開始まで [1]電源入力端子(CN1)に DC24V を印加。

[2]動作インジケーター(LED3灯)すべて点灯し、 駆動基板が起動します。(約10秒程度)

[3]動作インジケーターの(緑色)ランプがゆっくり 点滅し、スタンバイ状態となります。 *10 秒以内にスタンバイ状態にならない場合は、 一度電源を OFF にし「11動作インジケーターと機能」 または「12.こんなときは」をご確認ください。

[4]制御入出力端子(CN8)の Ch5-9 間を ON(CLOSE)にします。

[5]動作インジケーター(緑色)の「点滅」が「点灯」に

変わり、FPSC モジュール 08 が運転を始めます。

徐々に吸熱部の温度が下がっていきます。 同時にファンモーターも回転を始めます。

回時にファンモーターも回転を始めます。 *製品に異常があれば、赤や黄のLED(動作インジケーター)が点灯/点滅して製品が停止します。 *停止した場合には、「12こんなときは」をご確認ください。

<u>9.2 停止/終了のしかた</u>

[6]制御入出力端子(CN8)の Ch.5-9 間を OFF(OPEN)にすると、製品は停止します。 [7]吸熱部を常温に戻してください。吸熱部近傍に氷や水分が付着している場合は モジュール内部に入れないように処置を行ってください。

【注意】 運転時、使用時および使用直後は基板も製品も熱くなっていますので、触らないで ください<u>。</u>

9.How to Use(1/3) ①Start -Finish

<u>* 8.2 Connection is assumed to be in accordance with "8.2 Example of Wiring Connection() (SC-UG08S/N)."</u> * Assume that 5 V (output instruction 100%) is applied between Signal I/O port (CN8) Ch.1-2.

9.1 Power ON-Standby -Start Operation

[1] Apply 24 VDC to the power source input terminal (CN1).

[2] All operation indicators (3 LEDs) light up and

The DRIVE PCB boots up. (Within 10 seconds)

[3] The (green) lamp of the operation indicator blinks slowly and the DRIVE PCB is in the standby state.

- * If the unit isn't in the standby state within 10 seconds, turn the power off and check the cause with "11. Operation indicator and function" or "12. Troubleshooting".
- [4] Turn ON (CLOSE) between Ch5 and 9 of Signal I/O port (CN8).
- [5] The blinking of the operation indicator (green) changes to light and the FPSC

module 08 starts operation.

The temperature of the heat absorption part gradually falls.

The fan motor also starts to rotate.

* If there is a problem with the product, the red or yellow LED will light and the product will stop. * If you stop, "12.FAQ" on the page, pleases check.

9.2 How to stop / terminate

[6] If Signal input output port (CN8) Ch5-9 is turned OFF (OPEN), the product will stop.

[7] Return the heat absorption part to room temperature. If ice or moisture adheres near the heat radiation fin, remove it so that it does not enter the module.

【Note】

Do not touch the product as it is hot during operation, use and immediately after use. It causes burns.



(24/48)





9.使いかた(2/3) ②警告/異常信号

9.3 警告/異常信号が出る場所と条件

以下の条件/状態になると、駆動基板の LED の赤、または 黄が 点灯/点滅するとともに、制御入出力端子(CN8)の Ch.6、7、8 の電位が Ch.9(GND)に対してHi状態(5V)になります。

*このような異常/警告が出た場合は、直ちに使用を中止してください。 *原因となった箇所を確認し、改善の上、運転を再開してください。 <条件>

●Ch.6 がHi状態(5V)になる条件・・・「異常」のとき

・排熱部温度が 60℃を超え「排熱異常」になった時。

・電源入力端子(CN1)の電圧が DC24V+/-10%の範囲を外れた時。
 ・FPSC 本体が接続されていないか、又は CN2 への配線

(FPSC 電源コード)が断線している時。

・排熱部温度センサーが接続されていないか、断線している時。

<その場合の動作>

・駆動基板は製品と安全を守るため、<u>運転を停止します。</u> LED は赤が点灯します。

〈復帰方法>

製品に供給されている電源(DC24V)を OFF にするか、制御入出力端子(CN8)の Ch.5-9 間を 一度 OFF(OPEN)にしてください。「12 こんなときは」の内容をご確認の上、問題を解決したのち、 電源を再投入し, 運転を再開してください。

●Ch.7 がHi状態(5V)になる条件・・・「温度警告/異常振動検出による抑制動作」のとき

(1)排熱部温度が 54℃まで達したとき。

(2) 振動検出器が「異常振動」を検出し、抑制動作中である場合。 運転は継続します。

<その場合の動作>

- (1) 温度が 54℃よりも高い状態では、Hi状態(5V)が維持されます。LED の黄色が点灯します。 温度が 54℃未満に下がると、自動的に Low 状態(0V)になります。
- (2) 一時的に出力抑制しますが、復帰後は通常運転に戻ります。 (出力抑制時は LED の黄色が速く点滅します。)

●Ch.8 がHi状態(5V)になる条件・・・「制御入力が範囲外の警告」のとき

・制御入出力端子(CN8)の Ch.1-2 間の電圧が 1~5V の範囲外になった時。
 ・制御入出力端子(CN8)の Ch.3-4 間電流が 4-20mA の範囲外になった時。

<その場合の動作>

・FPSC は運転を継続します。LED は黄色がゆっくり点滅します。 制御入力が範囲内になるまでHi状態(5V)が維持されます。

制御入力が範囲内に戻ると自動的にHi状態(5V)は解除され、Low 状態(0V)に戻ります。

【注意】LED の表示の詳細は「11.動作インジケーターと機能」でご確認ください。

Ch.6 Ch.7 Ch.8

9.3 Location and condition of warning / abnormal signal Under the following conditions, the red or yellow LED of the DRIVE PCB lights up or blink, and the voltage of Ch.6, 7 and 8 of Signal Input output port (CN8) becomes Hi (5V) respect to Ch.9(GND).

* If such an abnormality / warning appears, stop the operation immediately

* Check the cause of the problem, restart the product after improvement.

<Condition>

● Ch. 6 is in Hi (5 V) =‴abnormal‴

- The warm side thermal sensor detects exceeds 60 $^\circ C$
- The voltage of the power source input terminal (CN1) is
- "Out of range: Power source input terminal (Out of DC24V+/-10%)"

•When the FPSC unit is not connected "CN2 wiring is disconnected". •When the warm side thermal sensor cord is not connected "CN6 disconnected"

<Operation in that case>

The DRIVE PCB shuts down operation to protect the product and safety. The activity indicator lights red.

<How to recovery>

Turn off the power supply (24 VDC) supplied to the DRIVE PCB, or turn off (OPEN) Ch.5–9 of Signal Input output port (CN8) once. Please check the contents of "12 FAQ", solve the problem and turn on the power again.

9. How to Use (2/3) ② Warning / abnormal signal

●Ch. 7 is Hi (5 V) = "Temperature warning" or "Power down by detecting Abnormal vibration"

(1) When the temperature of the warm side is reached to $54^\circ C$.

(2) When the vibration detector detects "Abnormal vibration".

Driving will continue.

<Operation in that case>

(1)If the temperature of warm side is higher than 54 $^{\circ}\mathrm{C},$ the Hi (5 V) is maintained. (Yellow

LED Lighting). The temperature of warm side drops below 54 °C, the status will be back

to normal condition, Hi (5V) is released and returns to 0V automatically.

(2) During the vibration detector is protecting , the output power will be suppressed once. (Yellow LED Fast Blinking). After recovering the operation will be return to normal condition.

●Ch. 8 is Hi (5 V) = "control input is out of range warning"

 \cdot When the control input at Ch.1–2 or Ch.3–4 of the port (CN8) is out of the range (1 to 5V / 4–20mA).

<Operation in that case>

Driving will continue. The LED is "Yellow LED Slow Blinking".

The Hi (5 V) is maintained until the control input for the specified terminal is within the range. When the control input is returns to the range, Hi (5V) is released and returns to 0V automatically).

[Note]Refer to "11.Function of Operation Indicator".

TWINBIRD CORPORATION

(25/48)

リインバード工業株式会社





Hi(5V) as" Outside of control input range(1-5V 4-20mA)".



Do not use [0000 -0101]

n

<u>10.保護機能について(1/3)SC-UG08S/TG08Sのみ</u>

①「振動検出器」による保護と復帰動作

本製品は「<u>1.大きな熱負荷を冷却する場合」</u>、あるいは「<u>2.冷却対象に大きな熱変動が生じた場合」</u> に、異音を伴う異常振動が発生し、故障に至る恐れがあります。

「振動検出器」による保護機能は、製品の異常振動を検出すると、自動的に制御入力を下げて 異常振動を抑えます。LED は黄色が点滅します。(*警告信号(CN8) Ch.7 が Hi 状態(5V)になり ます。異常振動から回復した後、通常運転に復帰します。

ご使用において、保護が頻繁に働く場合や、異常振動(ヒッティング)が発生した場合は、直ちに 使用を中止し、下記①②に従って調整の上、ご使用ください。



10. Protecting Functions (1/3) SC-UG08S/TG08S only

① "Vibration detector" protection and recovery operation

In this product, abnormal vibration with noise occurs in "<u>1. when cooling a large thermal load</u>" or "<u>2. when a large thermal fluctuation occurs in the object to be cooled</u>" There is a danger. When the abnormal vibration of the product is detected, the protection function by the "vibration detector" automatically reduces the output instruction to suppress the abnormal vibration. The LED is "Fast yellow Blink". (* Warning alarm1 (CN8) Ch.7 will be in Hi state (5V). After recovery from abnormal vibration, it will return to normal operation.

If this protection works frequently or abnormal vibration occurs during use, stop using immediately ,and then adjust/use the condition according to the following 12.



Cause and countermeasures
[Possible cause]
Because a large heat load is cooled.
[Correspondence]
•Reduce the rump up speed. (see "9.How to use")
•Decrease the control input 1 or 2 (see "9.How to use"))
[Possible cause]
There was a large thermal fluctuation during operation
[Correspondence]
•Decrease the control input 1 or 2 (see "9.How to use")



(27/48)

		· ·						
與常振動検出シーケンス			<u></u>		2Protection sequence with Vibration detector			
異常振動が検出されると、駆動基			こ落とします	•	1) DRIVE PCB suppresses and is idle FPSC operation forcibly when abnormal vibration is detected.			
64 ステップ目 (25%)まで FPSC と	出力を抑制します	0			2)FPSC power is suppressed to step 64 (25%)			
最長3秒保持します。	つ • の山 + ナ ほけ	当るしー レバナ	*++		3)Suppressed and Idle time is three seconds maximum.			
その後、64 ステップ目から、FPSC	こへの出力を通知	常通りに上げてい	でまり。		4)DRIVE PCB starts to drive FPSC from step 64 (25%) again.			
					出力			
		制御入	力		Output power			
		Control 3	nput		▲			
	set by CN8				復帰時間			
		Control step (h.1-2(V)) Ch.3-4(A)	Recovery time			
	MAX:	Step 256	5V	20mA	4)			
Ĩ								
256分割	75%:	Step 192	4V	16mA	1) SW1で設定された出力速度 Rumpup speed set bySW1			
Divied in					Kumpup speed set by SW1			
256 steps	50%:	Step 128	ЗV	12mA	異常振動の検出			
20000000								
	25%:	Step 64	2V	8mA	Abnormal vibration detect			
					2) 3)			
, L	MIN:	Step 1	1V	4mA				
復帰時間の算出/ Calculation		-			通常運転			
:SW1=[0110]、異常振動の					Time			
復帰時間(Recovery time =	(192-64)x 出	刀速度 4.0sec	/step+3 杓	9=515 秒	Normal operation Normal operation			
x) SW1= [1000], Abnormal vik	wation data atis	120aton (50	1		出力抑制運転と保持時間			
Recovery Time(sec) = (12		-		-216000	Suppressed and Idle operation			
Recovery Time(sec) = (120		p speed.J.osec	/ step+3se	-310sec	Suppressed and the operation			
E意】					[Caution]			
D機能は、異常振動の発生とFP	SC へのダメージ	を完全に防ぐも	のではあり	ません。	This function does not completely prevent abnormal vibration and damage to FPSC.			
使用においては、この保護機能(対象に	When using, make sure to adjust the output according to the customer's cooling target so that			
わせて出力調整を行ってください	。(詳細は 9.使)	い方をご参照くだ	さい)		such a protection function (suppression operation) does not work. (For details, refer to 9. How to			
					use)			

<u>10. 保護機能について(2/3)SC-UG08S/TG08S のみ</u>

10. Protecting Functions (2/3) SC-UG08S/TG08S only

リインバード工業株式会社 TWINBIRD CORPORATION

(28/48)

10. 保護機能について(3/3)

③そのほかの保護機能と復帰動作

本製品には、安全と製品を守るため、製品を自動的に緊急停止させる保護機能が搭載されてい ます。作動している場合、いずれの場合も製品は運転できません。運転できない場合、電源供給を 停止し、下記保護機能が働いていないかご確認ください。

保護機能	場所	作動条件	動作インジケーター表示	参照
逆電圧保護	電源入力端子 (CN1)	最大:-30V *正しく接続されれ ば使用できるように なります。	無し 	8.
過電圧保護	電源入力端子 (CN1)	最大+30V *適正電圧に戻れ ば使用できるように なります。	赤色の連続点灯 。 黄色:遅い点滅 (電源電圧が +26.4V以上や 21.6V以下になった 時に点滅動作開始)	8.
断線検知	FPSC 接続端子 (CN2)	FPSC 電源コードが 断線または脱落し た場合に運転を止 めます。	全て速い点滅 [▲] ■■ € € [▲] ■■ € € [▲] ■■ € €	8.
	振動検出器端子 (CN5)	振動検出器のコー ドが断線または外 れている場合に運 転を止めます。 *TYPE S のみ	赤色:速い点滅 黄色:速い点滅 * ■■ ミミ √ ■■ ミミ 。()	8. 10.
	排熱部温度 センサー (CN6)	排熱部温度センサ ーのコードが断線 または外れている 場合に運転を止め ます。	赤色:速い点滅 v v a	8.
記号の意味	〔□□〕 消灯 🔲 点	気灯 🛄 遅い点滅	■■ ミミ速い点滅	

10. Protecting Functions (3/3)

3 Other protection functions and recovery operation

This product is equipped with a protection function to automatically stop the product for safety and product protection. If it is working, the product cannot be operated in either case. If you cannot operate, stop the power supply immediately and check if the following protection function is working.

Protection	Position	Operating conditions	Operation Indicator	Ref.
Reverse voltage	Power source Input terminal (CN1)	Maximum:-30V *It can return after the correct connection is applied.	None	8.
Over voltage	Power source Input terminal (CN1)	Maximum +30V *It can return after the correct voltage is applied.	Red: ON Yellow: Slow blink (Blinking operation starts when the power supply voltage becomes + 26.4V or more or 21.6V or less.)	8.
Disconnection	FPSC Unit connection terminal (CN2)	Stop when the FPSC power cord to the FPSC body is broken or disconnected	Green: Fast blink Red: Fast blink Yellow: Fast blink	8
	Vibration detector terminal (CN5)	Stops when the vibration detector cord is broken or disconnected *Only TYPE S	Red: Fast blink Yellow: Fast blink ✓	8. 10.
	Warm side thermal sensor terminal (CN6)	Stop when the sensor cord is broken or disconnected.	Red: Fast blink [™] □□ € € [™] □□	8.
Meaning of symbol	() Off	ON 🛄 Slow B	Blink 🛄 🗧 Fast Blink	



TWINBIRD CORPORATION

(29/48)

11.動作インジケーターと機能

駆動基板の下図の位置に取り付けられている3つの LED が「動作インジケーター」です。 「赤、黄、緑」の3色で構成されており、点灯のしかたによって、下記の表に記載された状態で FPSC モジュール/FPSC ユニットが運転されていることをお知らせしています。



11. Function of Operation Indicator

3 LEDs mounted at the position on the DRIVE PCB shown in the following figure are the "operation indicator". It consists of three colors of "red, yellow and green", and the way of lighting indicates that the FPSC module / FPSC unit is being operated in the state described in the table below.





TWINBIRD CORPORATION

(30/48)

<u>12.こんなときは(1/7)</u>

異常が発生している時、製品と安全を守るために、内蔵の保護機能が作動することがあります。 保護機能が作動した場合は、始動できなかったり、停止したりすることがあります。 保護機能が作動している場合は、動作インジケーターの黄色や赤色が点灯/点滅しています。 下記に該当する症状が無いか、ご確認ください。

①動かない。			
その他症状	考えられる原因	対応	参照
・動作インジケーターが 全て点灯していない	接続忘れ/断線による停止 配線、圧着端子、電源電線が 正しく接続されていますか?	配線・結線・電圧印可状態を 再度確認してください。	8.
R	電源能力不足による停止 使用されている直流電源は 十分な能力がありますか? 能力不足で出力電圧が 21.6Vより低くなってい ませんか?	DC24V 電源(ピーク 10A 電 流対応品)をお使いくださ い。(→【7.2 推奨機種】)	7.
	逆接続保護機能による停止 電源入力端子(CN1)に接続さ れた電源の(+)(-)極性が逆 になっていませんか?	ー度電源を OFF にした後、 電源入力端子(CN1)に繋い でいる端子の(+)(-)極性を 確認し、正しく接続してください。	8. 10.
	短絡保護機能による停止 制御入出力端子(CN8)の Ch9-10 間や、その他の端子 が短絡していませんか?	制御入出力端子(CN8)の Ch9-10 間、またはその他の 端子が短絡していないか確 認してください。	8. 10.
・動作インジケーターが (緑)だけゆっくり点滅し ている。 * :	運転 ON スイッチ忘れ 制御入出力端子(CN8)の Ch5- 9 間がOFF(OPEN)になってい ませんか?	制御入出力端子(CN8)の Ch5-9間をON(CLOSE)にし てください。	9. 14.

12.FAQ(1/7)

When abnormal condition is detected, built-in protection may be activated to protect the product and safety. If the protection function is activated, the operation may stop, or may not start. If the protection function works, the yellow and red indicators will be turn on, or be blinking. Please check if there are no symptoms that correspond to the following.

Q1: Do not work			
Other behavior	Probable cause & Check point	Answer & Countermeasure	Ref.
•Not all operation indicators are on	Connection lost / stop by disconnection Are the wiring, crimp terminals and wires properly connected?	Check the wiring, connection and voltage application status again.	8.
R	Lack of power supply capacity Is the DC power used sufficient? Is the output voltage lowered due to lack of capacity and is lower than 21.6 V?	Use a 24 VDC power supply (peak 10 A current compatible products). $(\rightarrow$ [7.2 Recommended Device & Equipment])	7.
	Reverse connection protection function Is the (+) (-) polarity of the power supply connected to the power source input terminal (CN1) reversed?	Once the power is turned off, check the (+) (-) polarity of the terminal connected to the power source input terminal (CN1) and connect correctly.	8. 10.
	Short circuit protection function Is there a short circuit between Ch9-10 and other terminals of the Signal Input Output port (CN8)?	Check that there is no short circuit between Ch9-10 or other terminals of Signal Input Output port (CN8).	8. 10.
The operation indicator blinks slowly (green).	Forget the operation ON switch Is Ch.5-9 of Signal Input Output port (CN8). OFF (OPEN)?	Turn ON (CLOSE) between Ch. 5-9 of the Signal Input output port (CN8).	9. 14.



12.こんなときは(2/7)

②停止した。

その他症状	考えられる原因	対応	参照
 ・動作インジケーター 	電源能力不足による停止	DC24V 電源(ピーク 10A 電流	
(赤色)が点灯、黄色	①使用されている直流電源は十	対応品)をお使いください。	
が遅く点滅している。	分な能力がありますか?		
	②出力不足で出力電圧が 21.6V		7.
	より低くなっていませんか?		
R	より広くなっていよどんが、		
	電力過大による停止	 運転中に上限範囲(26.4V)を超	
۲ ۲ ۲ ۲	電力週入による停止 ①過電圧保護による停止	えると、保護機能が働いて製	
G	0	品が停止します。FPSC の出	
	供給電源電圧が 26.4V を	カ変化に影響されない電源回	7.
	超えていませんか?		7.
		路をご用意ください。	
	计教动识在不识教用类		
・動作インジケーター	排熱部温度の過熱異常		
黄色:点灯	製品は排熱部温度の異常を感知し		
赤色:点灯	以下の項目に該当していないか、		
	①製品周囲や排熱部近傍に障		
	害物がありませんか?	保してください。	6.
R	②放熱フィンの通気を妨げるゴ	放熱フィンに付着しているゴミ	
Y	ミ、ホコリ、汚れが付着していま	やホコリを柔らかいブラシ等で	6.
G	せんか?	取り除いてください。	
	③排気が吸気口に戻って循環し	吸気と排気の経路を分離し、	
	ていませんか?	排気循環をさせないでくださ	6.
		い。	
	④ファンモーターが故障(断線や	電源(DC24V)を OFF にし、10	
	破断)していませんか?	分程度待ってから再起動してく	
		ださい。再起動してもファンモ	
		ーターが回らない場合は、ファ	6.
		ンモーターの故障が考えられ	
		ます。	
	周囲温度が 35℃より高くなって	35℃以下の温度環境でお使い	
	いませんか?	ください。	6.
			Ŭ.

12.FAQ(2/7)

Q2:" Stop suddenly"

Other behavior	Probable cause & Check point	Answer & Countermeasure	Ref.
• Operation indicator (red) is on, and yellow is blinking slowly	Lack of power supply capacity 1)Is the DC power used sufficient? 2)Is the output voltage lower than the lower limit (21.6 V) due to the lack of output?	Use a 24 VDC power supply (peak 10 A current compatible products).	7.
ه	Excessive power Stop by over voltage protection Does the supply voltage exceed 26.4 V?	If the 26.4 V upper limit range is exceeded during operation, the protection function will work and the product will stop. Prepare a power supply circuit that is not affected by changes in the output power of FPSC.	7.
•Operation indicator (Yellow) lights (Red) lights	Overheat error of warm side temp The product detects an abnormali and has an emergency stop. Check	ty in the warm side temperature	
R	(1) Are there any obstacles around the product or near the warm side ?	-	6.
v	(2) Are there any dirt, dust, or dirt that blocks the ventilation of the radiation fins?		6.
	(3) Is the exhaust circulating back to the air intake?	Separate the intake and exhaust paths and do not allow exhaust circulation.	6.
	(4) Is the fan motor broker (broken) or broken?	Turn off the power (24 VDC), wait for about 10 minutes, and then restart. If the fan motor does not rotate after restart, the fan motor may be broken.	6.
	Is the ambient temperature of the product higher than 35 $^\circ$ C?	e Use in a temperature environment of 35 °C or less.	6.



<u>12.こんなときは(3/7)</u>

③起動後すぐに停止した。

その他症状	考えられる原因	対応	参照
・動作インジケーターは (赤色)だけが速く点 滅している。 *	排熱部温度センサー異常(断線) 排熱部温度センサー端子(CN6) が、抜けていたり、断線したりし ている恐れがあります。	排熱部温度センサーを端子 (CN6)へ差し直してくださ い。	5. 8.
・動作インジケーターは (赤色)と(黄色)が速 く点滅している。 *	振動検出器の異常(断線) 振動検出器(CN5)が、抜けてい たり、断線したりしている恐れが あります。	振動検出器を端子(CN5)へ 差し直してください。	5. 8.
・動作インジケーターは 全て速く点滅してい る。 [®] ■■ くく [®] ■■ くく 。■■ くく	FPSC 電源コードの異常(断線) FPSC への電源を供給する端子 台(FPSC 接続端子(CN2))の外 れや FPSC が断線している恐れ があります。	FPSC 接続端子(CN2)のネ ジを一度緩め、締め直してか ら、再起動してください。	5. 8.
④異音がする/異常動作インジケーターは緑のみが点灯しているまたは、動作インジケーターは緑が点灯しているまたは、動作インジケーターは緑が点灯、黄色が速く点滅している/した。	常振動 異常振動の発生の恐れ 冷却対象の熱負荷が大きすぎて いませんか?	出力速度を遅くし、制御入力 1 又は2を下げてお使いくだ さい。これでも直らない場合 は、熱負荷が大きすぎる可 能性があります。熱負荷を小 さくしてください。	10.
	異常振動の発生の恐れ 急激な冷却対象の熱変動が生じ ていませんか?	制御入力 1 又は 2 を下げて お使いください。冷却対象の 急激な温度変化を避けてく ださい。	10.

12.FAQ(3/7)

Q3:" Stopped immediately after starting."

			БС
Other behavior	Probable cause & Check point	Answer & Countermeasure	Ref.
•Only the (red) indicator	No warm side thermal sensor is detected	Reconnect the warm side	
flashes rapidly.	The warm side thermal sensor	thermal sensor to the	
	terminal (CN6) may be	terminal (CN6).	5.
R	disconnected or broken.		8.
* ██▋ <<			0.
G 			
Operation indicator	No vibration detector is found	Reconnect the vibration	
blinks rapidly (red)	The vibration detector terminal	detector to the	
and (yellow).	(CN5) may be disconnected or	terminal(CN5).	5.
r ■■■ 🗧 🗧	broken.		8.
			0.
Operation indicator is	No FPSC unit is detected	Loosen and tighten the FPSC	
fast (red) and blinks		Unit connection terminal	
. ,	FPSC Unit connection terminal		
slowly (yellow).	(CN2) or FPSC power cord may	(CN2) screw once, and then restart it.	5.
r 1111 🗧	be disconnected or be cut,	restart It.	8.
v ≣≣ ≷≷			
, 🛄 👯			
Q4:" Strange noise	e"/"Abnormal Vibration"		
The green operation	Fear of abnormal vibration	Reduce the rump up speed	
indicator is on	Is the heat load for cooling too	and decrease the control	
(normal). or	high?	input 1 or 2. If this does	10.
operation indicator		correct, the heat load may	10.
lights green and		be too high. Please reduce	
yellow blinks quickly.		the heat load.	
yenow binks quickly.	Fear of abnormal vibration	Decrease t the control input	
» :·····›	Has there been a rapid change in	1 or 2.	
	temperature for cooling?	Avoid sudden temperature	10.
×		change of the object to be	
G		cooled.	



TWINBIRD CORPORATION

(33/48)

12.こんなときは(4/7)

⑤冷えない または 冷えるのが遅い

緑が点灯、黄色が遅く 点滅している。 さ	考えられる原因 製品は「正常」ですが「CN8 Ch.1-2 食出しています。以下の項目に該		参照
緑が点灯、黄色が遅く 点滅している。 さ	食出しています。以下の項目に該		
点滅している。 さ			
伟		当していないか、確認してくだ	
	きし 、		
•ファンエーター(+) 運転 4	前御入出力の指示が無い	制御入出力端子(CN8)への	
- ノノノ レ ノ は 圧 払 市	前御入出力端子(CN8)の Ch.1,2	接続配線に 1-5V または 4-	
を続けている。 ま	⊧たは Ch.3,4 に接続している	20mA に相当する信号が出	
	-電線が断線	ていることを確認してくださ	
R	-電線が抜けている	い。	
× •	-1-5V の電圧が無い		
G	−4−20mA の電流が無い	制御入出力用の電線は、先	
	-間違った端子間	端加工し直したり、差し直し	
	(例えば Ch.2-3 間や Ch.4-5	たりしてください。	
	間)に接続していた。		
¥	等、ありませんか?	制御入出力端子(CN8)には	
伟	副御入出力の指示が範囲外	以下の特性/極性がありま	
	前御入出力端子(CN8)の Ch.1,2	す。	
ま	または Ch.3,4 に入れている	正しく接続してください。	8.
	-1-5Vの電圧極性が逆	Ch.1:1−5V (+)極	9.
	-4-20mA の電流方向が逆	Ch.2:1-5V (-)極	14.
	-1-5Vの電圧が 1V 未満	Ch.3∶4−20mA(+)極	
	-4-20mAの電流が 4mA 未満	Ch.4:4-20mA(-)極	
15	こなっていませんか?		
*(Ch.1-2 間、および Ch.3-4 間		
13	は、逆接続された場合、出力は		
Γí	範囲外:最小」となります。		
	削御入出力の指示が過大	本製品の制御入出力端子	
串	削御入出力端子(CN8)の Ch.1,2	(CN8)の定格は Ch1-2:1-	
	⊧たは Ch.3,4 に 5∨あるいは 20	5V、Ch3:4-20mA となりま	
m	nAを超える指示電圧/電流を入	す。これを超えた場合、駆動	
1	1ていませんか?	基板が故障に至る恐れがあ	
		ります。	

12.FAQ(4/7)

Q5:" It doesn't get cold or it gets cold slowly"

Other behavior	Probable cause & Check point	Answer & Countermeasure	Ref.
 Operation indicator is 	The product is "normal", but "CN8	Ch.1-2 / 3-4 control input 1	
green , and yellow is	or 2 is "out of range". Check if the	following items.	
blinking slowly.			
	No signal to Signal I/O port	Check that the control input	
 The fan motor 	It is connected in Ch.1, 2 or Ch.3,	1 is 1–5 V or the control input	
continues to operate.	4 of Signal input output port (CN8)	2 is 4–20 mA.	
	•Wire break		
R	 The wire is disconnected 	Rework or replace the end of	
× 1000	 There is no voltage of 1–5V 	the signal input output cable.	
	 There is no current of 4–20mA 		
	 The wrong terminal 	Signal input output port	
	(For example, between Ch.2-3 and	(CN8)	
	Ch.4-5 had been connected). etc.,	It has the following	
		characteristics / polarity.	
	Out of range to Signal I/O port	Connect correctly.	
	It is inserted in Ch.1, 2 or Ch.3, 4	Ch.1: 1-5V (+) pole	
	of Signal input output port (CN8)	Ch.2: 1-5V (-) pole	8.
	•The voltage polarity of 1-5V is	Ch.3: 4–20 mA (+) pole	9.
	reversed	Ch.4: 4–20 mA (–) pole	14.
	• 4-20 mA current direction is		
	reversed		
	•1–5V less than 1V		
	•4–20 mA current less than 4 mA		
	* When the connection between		
	Ch.1–2 and Ch.3–4 is reversed, the		
	output is "Out of range: Minimum".		
	Too much signal to Signal I/O port	The rating of Signal input	
	Is an applied voltage / current	output port (CN8) is Ch1-2:	
	exceeding 1–5 V or 4–20 mA	1-5V、Ch3:4-20mA.	
	applied to Ch.1, 2 or Ch.3, 4 of	If the exceeded input is	
	Signal input output port (CN8)?	applied, the DRIVE PCB may	
		be broken.	



(34/48)

12.こんなときは(5/7)

() ふったい またけ ふってのが足い(つづき)

⑤ 冷えない またに	は 冷えるのが遅い(つつき)	
症状	考えられる原因	対応	参照
・動作インジケーターは 緑のみが点灯している	製品は正常運転しています。 以下の項目に該当していないか、	確認してください。	
(正常)。 ・ファンモーターは運転 を続けている。 * () ↓ ()	 (Nagaricka) = D C C Mac Nation (Nagaricka) = D C C Mac Nation	 制御出力端子(CN8)の Ch.1-2間の電圧、または Ch.3-4間の電流が目標に対して適正か確認してください。 異常振動の防止ためにSW1 の速度を遅くすると、吸熱部の温度降下速度も遅くなります。 	9. 9.
	吸排気空間が無い、不十分 製品周囲や排熱部近傍に障害 物がありませんか?	吸排熱経路に十分な空間を 確保してください。	6.
	吸排気部が汚れている 放熱フィンにゴミ、ホコリ、汚れが 付着していませんか?	放熱フィンに付着しているゴ ミやホコリを柔らかいブラシ 等で取り除いてください。	6.
	排気が循環している 排気が吸気口に戻って循環して いませんか?	吸気と排気の経路を分離し、 排気循環をさせないでください。	6.
	排気がされていない 異物がファンモーターに挟まって いませんか?	電源(DC24V)を OFF にし、フ ァンモーターを確認したの ち、10 分程度待ってから再 起動してください。	6.
	環境温度が高い エアコン等からの送風によって 製品の周囲温度が 25℃より高く なっていませんか?	25℃以上の温度環境下の場 合、冷却性能が十分に発揮 できない場合がります。周囲 温度を下げてお使いくださ い。	6.

12.FAQ(5/7)

Q5:" It doesn't get cold or it gets cold slowly" (Cont.)

Other behavior	Probable cause & Check point	Answer & Countermeasure	Ref.
 Only the green 	The product is operating normally		
operation indicator	Check if the following items apply.		
is on (normal).	Signal I/O port instruction is low	Check if the voltage between	
	Is the input at Ch.1, 2 or Ch.3, 4 of	Ch.1-2 of control output	
 The fan motor 	the Signal Input Output port (CN8)	terminal CN8 or the current	9.
continues to	lower?	between Ch.3-4 is	
		appropriate for the target.	
operate.	SW1 setting is slow	If the setting of rump up	
<u>.</u>	Is the setting of rump up speed	speed change (SW1) is	
R	change (SW1) slower than before?	reduced to prevent abnormal	
Y		vibration, the temperature	9.
G		drop speed of the heat	
		absorption part will also be	
		reduced.	
	Insufficient space for air	Make sure there is enough	
	intake/exhaust	space for the heat absorption	6.
	Are there any obstacles around the	/ exhaust path.	0.
	product or near the warm side?		
	Intake and exhaust parts are dirty	Use a soft brush to remove	
	Are there any dust, dirt, or dirt on	dust and dirt adhering to the	6.
	the radiation fins?	radiation fins.	
	Exhaust is circulating	Separate the intake and	
	Is the exhaust circulating back to	exhaust paths and do not	6.
	the air intake?	allow exhaust circulation.	
	Not exhausted	Turn off the power (24VDC),	
	Is there a foreign object caught in	check the fan motor, wait	
	the fan motor?	about 10 minutes, and then	6.
		restart.	
	Environmental temperature is high	If the temperature is higher	
	Is the ambient temperature of the	than 25 °C , the cooling	
	product higher than 25 \degree C due to	capacity may not be fully	6.
	air flow from the air conditioner	exhibited. Make the ambient	0.
	etc.?	temperature lower before	
		use.	



<u>12.こんなときは(6/7)</u> ⑤ 冷えない またけ、冷えるのが遅い(つづき)

(5)冷えない またに	よ 冷えるのが遅い(つつき	·)	
症状	考えられる原因	対応	参照
・動作インジケーターは 緑のみが点灯している (正常)。	冷却対象が大きい 冷却対象の熱負荷が大きすぎる ことはありませんか?	熱負荷が大きいほど、冷却 対象の温度が下がりにくくな ります。	6. 10.
・ファンモーターは運転 を続けている。 * 〔〕 ↓ 〔〕 ₀ ■	断熱が不十分 断熱が破れていたり、劣化しい たりしていませんか?	冷却対象および吸熱部周辺 の断熱が破れていたり、断 熱材の表面に霜や結露がで きたりしないように適切に処 置してください。	6. 10.
	熱の伝わりが不十分 冷却対象と吸熱部との微細な隙 間により、熱が冷却対象に伝わ り難くなっていませんか?	冷却対象と吸熱部の間の熱 密着が悪い(微細な隙間が ある。)と、製品の冷却性能 が十分に発揮できない場合 があります。 冷却対象と吸熱部の微細な 隙間には、熱伝導グリスを充 填、密着させるのが効果的 です。	6.
・動作インジケーターは 緑が点灯、黄色が速く <u>点滅している/した。</u> *TYPE Sのみ * () * () * () * ()	振動検知器による出力抑制中 運転音や振動が大きくなってい ませんでしたか?	製品の振動が大きくなり過ぎ たため、出力を下げて運転し ています。復帰するまでしば らくお待ちください。動作イン ジケーターの黄色の点滅が 消えると、徐々に復帰してい きます。	10.

12.FAQ(6/7)

Q5:" It doesn't get cold or it gets cold slowly" (Cont.)

Other behavior	Probable cause & Check point	Answer & Countermeasure	Ref.
• Only the green	The object to be cooled is large	The greater the thermal load,	
operation indicator	Is the heat load to be cooled too	the less likely the	6.
is on (normal).	high?	temperature to be cooled will	10.
is on (normal).		drop.	
 The fan motor continues to operate. ^a ^c ^c ^c	Insufficient heat insulation Is the insulation broken or deteriorated?	Take appropriate measures so that the heat insulation around the object to be cooled and the heat absorption part is broken, and the surface of the heat insulation material cannot be frosted or condensed.	6. 10.
	Inadequate heat transfer Is it difficult for heat to transfer to the cooling target due to the minute gap between the cooling target and the heat absorbing part?	If the heat contact between the object to be cooled and the heat absorbing part is poor (there are minute gaps), the product's cooling capacity may not be fully exhibited. It is effective to fill and adhere the heat conducting grease to the minute gap between the cooling target and the heat absorbing part.	6.
Operation indicator lights green and yellow blinks quickly. ▼Only TYPE S	Suppression by vibration detector Did the driving noise or vibration increase?	Because the vibration of the product became too large, the output instruction is suppressed. Wait for a while to recover. When the yellow blinking of the operation indicator disappears, it will gradually recover.	10.


12.こんなときは(7/7)

⑥騒音/振動が大きい

症状	考えられる原因	対応	参照
・動作インジケーターは 緑色だけが点灯してい る。 [*] [] ↓ [] 。	製品の固定が弱い 製品の固定部が緩んでいません か? 冷却対象と吸熱部が相互に十 分固定されていますか? すきまは熱伝導グリスなどで充 填されていますか?	弊社製品は FPSC 自体が振 動するため、モジュール自体 を十分に固定する必要があ ります。モジュール下端にあ るネジに対して、確実に固定 できるよう取り付けてください。 吸熱部には熱伝導グリスを 用いてすきまを埋め、十分に 固定してください。	6.
	防振が不十分 防振構造が十分に働いています か?製品の振動が伝わり、外部 を震わせていませんか?(共振 等)	防振シートを追加するなど、 振動を抑える処置を施してく ださい。	6.
	冷却対象が大きすぎ 冷却対象の熱負荷が大き過ぎて いませんか?	吸熱部の温度が使用温度範 囲を超えてしまうと、振動が 大きくなることがあります。 熱負荷が大きい場合は、 ゆっくり冷却するため、出力 速度設定を遅くするか、制御 入出力端子(CN8)の Ch.1-2 又は Ch.3-4 への入力を下げ てお使いください。 小さい熱負荷の場合は、制 御入力を下げてゆっくり冷却 してください。	9. 10.

12.FAQ(7/7)

Q6:" Noise / Vibration is large"

Other behavior	Probable cause & Check point	Answer & Countermeasure	Ref.
 Only the green indicator lights up. ^R	Weak fixation of product Is the fixed part of the product loose? Is the object to be cooled and the endothermic part sufficiently fixed to each other? Is the gap filled with thermal grease or the like?	As this product vibrates FPSC itself, the module itself needs to be fixed sufficiently. Make sure that the screws at the bottom of the module case (SC-UG08), or Unit fixing Nut (SC-TG08) can be securely fixed. Fill the gap with heat conduction grease in the heat absorption part and fix it sufficiently.	6.
	Vibration isolation is insufficient Is the anti-vibration structure working enough? Is the vibration of the product transmitted to shake the outside? (Resonance etc.)	Take measures to suppress vibration, such as adding a vibration proof sheet.	6.
	Target is too large Is the heat load to be cooled too high or too low?	If the temperature of the heat radiation fin exceeds the operating temperature range, the vibration may increase. If the thermal load is large, reduce the rump up speed or "Signal input output terminal(CN8) Ch.1-2 or Ch.3- 4" lower in order to cool down slowly. For small heat loads, decrease the control input. ,and cool slowly.	9. 10.



TWINBIRD CORPORATION

(37/48)

13.廃棄のしかた(1/3)

FPSC 内部には高圧のヘリウムガスが封入されています。下記にある「必要な用具」を用意し、「手順」に従ってヘリウムガスを抜き、各国/地域の法律および規制に従って廃棄してください。

【1】用意するもの

	1 ··· ··		
用具	使用目的		数量
①�6.35mm ピアシングバルブ	銅パイプに穴をあける道具です。	•••	1
Fo	ガス抜きのために必要になります。		
②作業用手袋	分解作業において、鋭利な箇所から手を 保護するために必要です。		1
③保護メガネ	分解作業において、目を保護するために 必要です。		1
④4mmビス用プラスドライバー	モジュールケースを分解するときに使いま	•••	1
*SC-UG0 の時のみ	す。		
⑤M8 用六角レンチ	FPSC 本体に装着されている内部の金属	•••	1
*SC-UG0 の時のみ	リングを取り外すときに使います。		
【注意!】			
換気の悪い場所で作業すると、放	≹してくだい。ヘリウムガスは人体に無害ですか 出されたヘリウムガスによって窒息する恐れが ネを身に着けてから作業を開始してください。		
	など、鋭利な箇所に触れてケガをする恐れがあ	ります。	
 この作業は、製品を常温に戻してお 行うことを推奨します。 	から行ってください。運転停止後、1日以上経避	してから	>
・ ヘリウムガスを抜いた後も、FPSC	本体の分解や解体はしないでください。		
 ヘリウムガスを抜いた後も、製品を 	を高温にさらしたり、火気に投入したりしないで	ください。	

内部にわずかに残ったガスが膨張して製品が破裂する恐れがあります。

13. How to dispose (1/3)

High pressure helium gas is sealed inside the FPSC. Prepare the "Required Tools" below, degas in accordance with the "Procedures" and dispose in accordance with local / regional laws and regulations.

[1]Tools for disposing

Item	Purpose of use	Q'ty
①Φ 6.35 mm piercing valve	It is a tool to make a hole in a copper •••	1
F	pipe. It is necessary for degassing.	
②Work gloves	In disassembly, it is necessary to protect •••• your hands from sharp points.	1
③ protective glasses	Necessary to protect eyes in •••• disassembly work.	1
④Phillips screwdriver for 4 mm screws* Only at SC-UG08	Used to disassemble the module case. •••	1
⑤Hex wrench for M8	Used to remove the internal metal ring •••	1
* Only at SC-UG0	attached to the FPSC body.	
[Caution!]	•	
 Helium gas is harmless to the human b 	oody, but when working in an enclosed space	
or poorly ventilated area, the emitted l	nelium gas may cause suffocation.	
	sses suitable for work before starting work.	عاما مامغ
and resin cases.	rp points such as the corners and end faces of me	ital plat
	e before performing this work. It is recommended	that o
day or more elapse after operation sto		
\cdot Do not disassemble or disassemble the	FPSC main unit even after degassing	
	mperatures or turn on fire even after degassing	. A slig
amount of Helium gas remaining inside	may expand and the product may burst.	



13.廃棄のしかた(2/3) 【2】SC-UG08 の場合・・・事前にモジュールケース等の部品を取り外します。 作業イメージ 【作業の手順】 \bigcirc ①全配線外す ます。 (2) 10mm)を取り外してください。 3 スポンジを剥がしてください。 ④ モジュールを上下に分離します。 (5) ②ネジ外す x4 納・固定されています。 ュールから取り出してくだい。 ④上下分離 【注意】 ③剥がす めて作業してください。 ⑤取り出す 6 外します。 ⑥ネジ外す (7) 【注意】 やFPSC電源コードが引っかかる場合が (7)抜く っくり取り出してください。 Ŋ (8) 次のページ「【2】TG/UG 共通」に進みま す。

基板に接続されている、全ての端子およ び FPSC 電源コードを基板から取り外し モジュールの側面にあるネジ4か所(4x ファンモーターの排気口に貼られている 金属製のリング内に、FPSC 本体が収 金属製リングと共に、FPSC 本体をモジ 金属製のリングの端面や角は鋭くなって います。ケガを防ぐため、必ず手袋をは 六角穴付きボルト(M8x10)を3カ所取り 金属製のリングをゆっくり引き抜きます。 金属製のリングを引き抜くとき、銅パイプ

あります。無理をして強く引っ張らず、ゆ

13. How to dispose (2/3)

[2]For SC-UG08 · · · Remove parts such as the module case in advance.





TWINBIRD CORPORATION

(39/48)

13.廃棄のしかた(3/3)

【3】TG/UG 共通・・・ガスの抜きかた



<u>13.How to dispose (3/3)</u>

Work image	[Procedure]
Enlarged view	 ③ Attach the piercing valve to the copper pipe □ position on the side of the FPSC body. If the piercing valve cannot be obtained, grasp the holding part in the enlarged view, grasp the end of the pipe, bend the pipe compression part slowly several times, and degas slowly. ① If the helium gas inside is drained rapidly, the copper pipe and the FPSC main body may rapidly cool. Degas the gas slowly, as a guide that the copper pipe and the FPSC body do not get cold. ① Leave for more than 24 hours. (It is to completely remove the residual gas inside) ② Dispose of in accordance with local / regional laws and regulations once the exhaust has been exhausted.

(40/48)

<u>14.仕様(1/6)</u>

14.1 主な仕様(タイプ S と N 共通)

No.	項	E	仕 様				
	品番		SC-UG08(S/N)	SC-TG08(S/N)			
	品名		FPSC モジュール 08	FPSC ユニット 08			
1	製品寸法(約)		W175 x D190 x H290 mm	W130 x D130 x H280mm			
		駆動基板のみ	-	W145 x D90 x H45mm			
2	製品質量(約):	*駆動基板含む	3.6kg	2.4kg			
3	冷媒		ヘリ	ウム			
4	冷媒量		(} g			
5	冷媒圧力		3.0	MPa			
6	定格電圧		DC	24V			
7	定格電流※1		6A(F	RMS)			
8	ピーク電流 ^{※1}		10A				
9	冷凍能力※2						
	[条件] 周囲	围温度: 25℃	≧25W				
	制御入力:最大(100%)	(吸熱部温度 −80℃)				
10	使用温度·	周囲温度	0 ~ +35 °C				
11	湿度条件 ^{※3}	吸熱部温度	-100 ~ -20 °C				
			(最大出力時)				
12		排熱部温度	0~	+60 °C			
13		湿度	0~	90 %RH			
			結露なきこと				
14	付属品		無し (駆動基板は実装)	駆動基板×1 枚			

※1 ・推奨電源機器「7.準備 【7-2 推奨機種】」をご参照ください。

※1 ・ピーク電流が 10A 流れる場合があるので、10A 以上の容量を持つ電源をご使用ください。

- ※2 ・冷凍能力は吸熱部温度、周囲温度などによって異なります。
- ※3 ・吸熱部温度が-25℃より高くなる場合は、FPSC への出力設定(CN8 Ch.1-2/3-4)を下げてく ださい。
- ※3 ・本製品を動作させたまま吸熱部温度を急激に変化させた場合、異常音/異常振動が 発生することがあります。貴社の製品に応じて異常音/異常振動が発生しないように ご使用ください。

14.Specification(1/6)

14.1 Main Specification (TYPE S and N Common)

No.		Item		Specification				
	Model Number			SC-UG08(S/N)	SC-TG08(S/N)			
	Model Name			FPSC MODULE 08	FPSC UNIT 08			
1	Product Dimensi	on		W175 x D190 x H290 mm	W130 x D130 x H280mm			
	(Approx.)	D	RIVE PCB	-	W145 x D90 x H45mm			
2	Weight (Approx.)	* Include	DRIVE PCB)	3.6kg	2.4kg			
3	Refrigerant			Heliu	um			
4	Amount of Refrig	gerant (A	pprox.)	3 (5			
5	Inside Pressure	of Stirlin	g Cooler	3.0 N	1Pa			
6	Rating Voltage*1			DC2	4V			
7	Rating Current ^{*1}			6A(RMS)				
8	Maximum Peak 0	Current ^{*1}		10A				
9	Cooling Capacity	/ ^{*2}						
	[Condition] A	mbient 7	ſemp.: 25°C	≧25W				
	Control Input: N	/lax (100	%)	(Cold Side Temp.: −80°C)				
10	Operating	Ambier	t Temp.	0 ∼ +35 °C				
11	Conditions of	Cold Si	de Temp.	-100 ~ -20 °C				
	Temperature			(Maximum output condition)				
12	and Humidity*3	Warms	ide Temp.	0 ~ +60 ℃				
13		Humidi	ty.	0 ~ 90 %RH				
				No Dew Cor	ndensation			
14	Accessories			None				
				(DRIVE PCB is installed	DRIVE PCB x 1pcs			
				in advance)				

*1 Refer to "7. Preparation [7.2 Recommended Device & Equipment]" for recommended power supply devices.

*1 Since a peak current of 10 A may flow, use a power supply with a capacity of 10 A or more.

*2 Cooling capacity changes depends on the cold side temperature, ambient temperature, and etc. *3 Make the output instruction of FPSC (by Signal input output port(CN8 Ch.1-2/3-4) lower in case that the temperature of the cold side becomes higher than -25 $^{\circ}$ C.

*3 If the temperature of the cold side is changed rapidly while operating this product, abnormal noise / vibration may occur. Use the product carefully so that abnormal noise / abnormal vibration does not occur according to the application product.



(41/48)

<u>14.仕様(2/6)</u>

14.2 駆動基板の入出力端子 部品仕様

CN	仕様	CN		仕様
[CN1]	東朋テクノロジー(株)	[CN8]	WAGO 2	50-1410 2.54MM 10-P
	PBX10C51-2-EN		·適合電	線:
	·端子ネジ: M3.5		単線	0.14~0.5mm²
	・適正締付トルク:: 0.8~1.2Nm			(24~20 AWG)
	適合端子 : 圧着丸端子(スズメッキ付き)		より線	0.2~0.5mm ²
1	+ 電源入力端子(CN1)			(24~20 AWG)
2	-		・電線むる	き長さ: 8.5-9.5mm
[CN2]	東朋テクノロジー(株)	Ch. No	記号	機能説明
	PBX10C51-2-EN	1	V+	FPSC 制御入力 1(1-5V)
	·端子ネジ: M3.5	2	V-	(差動入力:インピーダンス 1kΩ)
	·適正締付トルク: 0.8~1.2Nm	3	I+	FPSC 制御入力 2(4-20mA)
	・適合端子 : 圧着丸端子(スズメッキ付き)	4	I–	(差動入力:インピーダンス 100Ω)
1	ファンモーター端子(CN3)	5	Drv	運転/停止信号入力
2	(FPSC 出力)	6	EMG	異常信号出力
[CN3]	JST B2B-PH-K-S(LE)(SN)	7	AL1	警告信号出力1
	・適合コネクタ: JST EHR-3	8	AL2	警告信号出力 2
1	+ ファンモーター端子(CN3)	9	GND	GND
2	- (ファンモーター出力)	10	DC5V	DC5V
[CN5]	JST B05B-PASK-1(LE)(SN)			SW1
	振動検出器端子			
[CN6]	JST B2B-PH-K-E(LE)(SN)(青)			
	・適合コネクタ: JST PHR-2	CN	B	CN5
1	排熱部温度センサー端子(CN6)			
2	*青色			
[SW1]	DIP スイッチ(4ビット)	CN3		
	出力速度設定			
[LED]	動作インジケーター			
1	赤 異常(緊急停止)	CN2		
2	黄 警告(運転継続)			
3	緑 正常(スタンバイ/運転中)			
	· · · · ·		N1	

14.Specification(2/6)

14.2 I/O port parts specification on DRIVE PCB

4.2 I/O port parts specification on DRIVE PCB									
CN		Specification		CN					
[CN1]	тоно	TECHNOLOGY	CORP.	[CN8] WAGO 250-1410 2.54MM 10-P					
	PBX10C5	1-2-EN		-Acceptable Wire:					
	- Screw:	M3.5				rire 0.14 ~ 0.5mm²			
	- Proper	Torque: 0.8~1.2N	lm			(24~20 AWG)			
	-For Solderles	ss Ring Terminal with Tin p	lating		Strande	ed wire 0.2~0.5mm ²			
1	+ Powe		Terminal			(24~20 AWG)			
2	– (CN1))			-Strip Ler	ngth: 8.5–9.5mm			
[CN2]	тоно	TECHNOLOGY	CORP.	Ch. No.	Symbol	Description			
	PBX10C5			1	V+	FPSC control input 1(1–5V)			
	- Screw:			2	V-	$(Impedance 1k\Omega)$			
		Torque: 0.8~1.2N		3	I+	FPSC control input 2(4-20mA)			
	- For Solderle	ess Ring Terminal with Tin	plating	4	I-	(Impedance 100Ω)			
1	FPSC Uni	t connection termin	al(CN2)	5	5 Drv Drive / Stop of FPS0				
2	(Output t	o FPSC)		6	EMG	Emergency Signal output			
[CN3]	JST B2B	B-PH-K-S(LE)(SN)	7	Warning Alarm 1 output				
	· · ·	Connector: JST PHR-		8	AL2	Warning Alarm 2 output			
1	+ Fan m	otor connection termi	nal(CN3)	9	GND	GND			
2	– (Outp	out to Fan motor)		10	DC5V	DC5V			
[CN5]	JST B05	B-PASK-1(LE)(S	N)	L	ED	SW1			
	Vibration	ı detector termina							
[CN6]	JST B2B	-PH-K-E(LE)(SN)	(BLUE)						
		Connector: JST PHR-		C	N8	CN5			
1	-	de thermal sensor	terminal						
2	(CN6) *E	Blue							
[SW1]	DIP Swit	ch (4 Bits)		CN	2				
_	Rump up S	peed Change							
[LED]	Operatin	g Indicator		_					
1	RED	Abnormal(Emergenc	y Stop)	CN	2				
2	YELLOW	Warning(Keeping op	eratoin)						
3	GREEN	Normal (Standby/Op	perating)						
				ſ					



TWINBIRD CORPORATION

(42/48)

14.仕様(3/6)

14.3 入出力端子の詳細

端子番号	機能説	機能説明								
[CN1]	定格電	圧	DC24 V							
	定格電	流	定格 6A(RMS) /最大 10A (DC24V 入力時)							
	極性	1	+							
		2	-							
[CN3]	端子仕	様	JST 製 B2B	-EH ((白)・	適合⊐∶	ネクタ: JST	EHR-2		
ファンモーター	出力条	件	FPSC 駆動	诗						
出力端子	極性	1	+	出た	」電圧	電源	電圧(CN1)	+0/-0.3V		
		2	-	出力	」電流	最大	0.5A (RMS)		
[CN8] Ch. 1-2	₩1 [[] FPSC	制御入力1と	:2」に同時に入力な	がある場	合、「FP	SC 制御入	カ 1」が優先され	<i>.</i> ます。		
FPSC 制御入力 1				入	力有効	範囲				
 (1-5V 電圧) ^{※1} 【ご注意】貴社制御装置が 		圧 V [V] Ch. 1-2)	0≦V<1	1		5	5 <v≦5.25< td=""><td>V>5.25</td></v≦5.25<>	V>5.25		
離れている場合等、ノイズ	出力目	標値[%]	0 警告 2 出力	0		100	100	100 警告 2 出力		
<u>の影響を受けやすい環境</u> でご使用の場合には、	入力回	路	差動入力 (非絶縁)	図						
<u>"[CN8]Ch.3-4 FPSC 制御</u> 入力 2 [*] を使用してくださ	入力イン	ピーダンス	200k Ω	+ ₩ 200kΩ 200kΩ − ∨+ (Cl				0kΩ OV+ (Ch.1)		
<u><u>u</u>,</u>	最大許	容電圧	5.25V(上記範囲を超えて入力を入れないでください。							
[CN8] Ch.3-4	%1 ^Γ FPSC	制御入力1と	:2」に同時に入力な				カ 1」が優先され	<i>、</i> ます。		
FPSC 制御入力 2			1	入	力有効	範囲				
(4−20mA 電流) ^{※1}	入力電流 (CN8 C		0≦V<4	4		20	20 <i≦21< td=""><td>I>21</td></i≦21<>	I>21		
	出力目	標値[%]	0 警告 2 出力	0		100	100	100 警告 2 出力		
	入力回路		差動入力 (非絶縁)	図			-OI- (Ch.4)			
	入力インピーダンス		100 Ω		+			-OI+ (Ch.3)		
	最大許	容電流	21mA(上記道	範囲を	超え	て入力を	そ入れないて	でください。)		

14.Specification(3/6)

14.3 Details of input /output terminals

•	out / output terminais									
Terminal Number	Descrip									
[CN1]	Rating voltage			DC24V						
Power Source	Rating (Current		Rating 6A	(RMS)/	Max.10)A peak	(at 24VDC	input)	
Input Terminal	Pole	1		+						
		2		-						
[CN3]	Specificati	on		JST B2B-E	EH (Whi [.]	te) Ac	ceptable	Connector: JS	T PHR-2	
Output to Fan Motor	Condition	for output		While FPS	C is driv	ven				
	Pole	1		+	Output	voltage	Power	Source Input Vol	tage(CN1)+0/ -0.3V	
		2		_	Output	current	0.5A	(RMS) Max.		
[CN8] Ch.1-2	*1 Input	: voltage ł	nas p	oriority over	r input o	current				
FPSC control input 1					Availab	le Input	Range			
(1-5V Voltage) *1	Input Vol	tage V [V]		0≦V<1	1		5	5 <v≤5.25< td=""><td>V>5.25</td></v≤5.25<>	V>5.25	
[Caution] Please use	(CN8 (Ch. 1-2)	,		1		J	J∕V⊇J.2J	v / J.2J	
"[CN8] Ch.3-4 FPSC	Output 1	Farget (%)		0	0		100	100	100	
control input2″ if your			Warning Alarm2				100	100	Warning Alarm2	
system is susceptible to	•	o	Dif	fferential input	Fig.		200k Ω	• • •	V_{-} (Ch 2)	
the effect of EMI noise	Input	Circuit	(N	lon-Insulated)	200k Ω V- (Ch.2) 200k Ω V+ (Ch.1)					
(Ex: far long distance to	Impe	dance		200k Ω						
the Drive PCB).										
	Maximu	m allowab	le vo	oltage	5.25V Do not apply beyond the above range.					
[CN8]Ch.3-4	*1 Input	t voltage k	nas p	oriority ove	r input o	current		1		
FPSC control input 2					Availab	ole Input	Range			
(4-20mA current) *1		rent I [mA] Ch. 3-4)	0	0≦V<4	4		20	20 <i≦21< td=""><td>I>21</td></i≦21<>	I>21	
	Output Target (%)		W	O arning Alarm2	0		100	100	100 Warning Alarm2	
	Input	Circuit		fferential input Ion-Insulated)	Fig. 200k Ω 					
	Impe	dance		100 Ω						
	Maximu	m allowab	le cı	urrent	21mA	(Do no	t apply	beyond the	above range.)	

シリインバード工業株式会社

TWINBIRD CORPORATION

(43/48)

<u>14.仕様(4/6)</u>

14.4 入出力端子の詳細

端子番号										
[CN8] Ch.5						絡(GND)				
運転/停止信号			するとき		開	放(DC5V)	オー	・プンコレクタ		
入力	7	、力回题	路				<u>5V</u>			
							47kΩ ≹	• • •		
	D	C5V						→ Drv.Sig		
	(:	±10%)								
[CN8] Ch.6	I	E常時			Lov	w				
異常信号出力	昪	尾常時			Hig	gh				
					FP	SC とファンヨ	Eーターへの	出力も停止す	ける。	
		※異	常		(1		温度センサ-			
			定条件					60°C」に達し	,t。	
					(2) 入力電	原電圧が範	囲外である。		
							+/-10%)			
					(3	(3) FPSC 本体が接続されていないか、又は				
						断線した。				
					(4	(4) 排熱部温度センサーが接続されていない				
					か、又は、断線した。					
		*			(1	(1) 運転/停止信号が停止になった時				
		異常	信号		(2) 雪酒 λ	カ姆ヱ(cNi	1)への通電を		
		出力	停止条	件	(2		による再起			
					(3			勤処理後 8) Ch.5-9 間を		
					(3			5000.5-9 間を よる再起動処理		
出力回路	<u> </u>					ULUSE(U	11/1-9 OLCI-	よる円起到処理	次	
			●出ノ	5件#	様					
DC5V			<u>●山</u> / 項		1	最小	標準	最大	条件	
			出力	Hig	h	DC4.55V	DC4.83V	-	I=0.1mA	
~~ ^		電圧	Lov		-	-	DC0.49V	I=0.01mA		
							1			
	kΩ									
		EMG								
47kΩ ≸	C									
			•							

14.Specification(4/6)

14.4 Details of input /output terminals

Terminal Number	Description							
[CN8] Ch.5	Drive			Sho	rt circuit(G	ND)	Connection m	ethod
Drive/Stop of FPSC	Stop			Open circuit(DC5V)		C5V)	Open collector	r
	Input Circuit			5V 47kΩ				
	DC5V	,			<		• Drv.Sig	
	(±10	%)				-		
[CN8] Ch.6	Norma	al		Low	1			
Emergency signal output	Abnor	mal (Alarm)		High				
					p output to			
		Judgement		(1)			arm side therma	
	conditio "Abnor status		of			••	t temperature (6	-
				(2)	(2) The power source input voltage is out of range.(DC24V +/-10%)			
Status		acuo		(3) FPSC unit is not connected, or FPSC power				
				cord is cut.				
				 (4) Warm side thermal sensor is disconnected or wire is cut. (1) When the on / off signal goes off (2) After restart processing by turning OFF the power 				
	*(Condition f	for					
	ca	ancellation	of					
	th	e alert sigr	nal	 to the power source input terminal (CN1) (3) Turn off (OPEN) Ch.5-9 of Signal Input output port (CN8), and turn on (CLOSE) Ch.5-9. 				11)
	OL	itput						t output port
Output Circuit								
5VDC		●Outpu	-	ecifi				
			Item		MIN.	TYP.	MAX.	Condition
		Output	Hig	· · · ·	DC4.55V	DC4.83V		I=0.1mA
		Voltage	Lov	N	-	-	DC0.49V	I=0.01mA
EMG 47k Ω \$								



TWINBIRD CORPORATION

(44/48)

14.仕様(5/6)

14.5 入出力端子の詳細

端子番号	機能説明						
[CN8] Ch.7	Low			「正常」			
警告信号出力 1	High			「警告信号 1」(運転継続)			
	※警	告信号	1	(1) 排熱	熱に設置し	た温度セン・	サーの温度
	判定	条件		が「	警告温度 54	℃」を超えて	いる。
					カ検出器が勇		
				動作	Fによって出た	カを抑制して	いるとき。
				(TY	PE S のみ)		
	※警	告信号	1	(1) 排熱	熱に設置し	た温度セン・	サーの温度
	信号	出力停止	条件	が警	告の条件に	該当しなくな	った時。
				(2) 出力	」抑制動作が	解除された	寺。
	出力回	路			路(警告信号	出力1と2	共通)」参照
[CN8] Ch.8	Low			「正常」			
警告信号出力 2	High			「警告信号	2」(運転継維	売)	
	※警	告信号	2	(1) FPSC への出力設定信号のレベルが規			
		条件)範囲外であ		
	※警告信号 2		(2) 警告の条件に該当しなくなった時。				
	信号出力停止条件			下記「出カ回路 (警告信号出力 1 と2 共通)」参照			
	出力回路		下記「出力回	路(警告信号	出力1と2	共通)」参照	
出力回路(警告信	号出力						
DC5V			力仕様				
		項目	1	最小	標準	最大	条件
		出力	High	DC4.55V	DC4.83V	-	I=0.1mA
AL1		電圧	Low	-	-	DC0.49V	I=0.01mA
······································	kΩ AL1						
47kΩ ≶	-WI-O Al2						
端子番号	機能說明	-	- (<u></u>			
[CN8] Ch.9	制御入出力端子(CN8)用のグランド。						
GND	シグナルグランド						
[CN8] Ch.10	電圧リファレンス						
DC5V	(DC5V -	-/- 10%))				

14.Specification(5/6)

14.5 Details of input /output terminals

Terminal Number	Description							
[CN8] Ch.7	Low		"Normal"					
Warning Alarm 1	High			"Warning Alarm1" *Continue driving.				
output	* Situation for			(1) The temperature of warm side thermal sensor				
	Warn	ing Alarm	n 1	reache	s "Warning Ala	rm 1 limit temp		
	outpu	t		(2) When t	he vibration deter	ctor detects abn	ormal vibration	
					presses the outp	ut by protective	operation.	
				(TYPE	· · ·			
	*Cond				he temperature			
	for ca	ncellation		-	own "Warning Alar	•		
				(2) When t	ne output suppres	ision operation is	s canceled.	
	Output	Circuit		See "Output Cir	cuit (Common to	Warning Alarm1	and 2)"	
[CN8] Ch.8	Low			"Normal"				
Warning Alarm 2	High *Situation for			"Warning Alarm 2" *Continue driving.				
output				(1) The signal level of output instruction is out				
	Warning	Alarm 2 outp	out	of the	allowed range).		
	*Condition			(2) When the signal level of output instruction is				
	for cancellation		۱		the allowable	-		
Output Circuit					cuit (Common to	Warning Alarm1 a	nd 2)″	
Output Circuit (Co	ommon to							
5VDC				ecification	T/D			
·		Iter		MIN.	TYP.	MAX.	Condition	
		Output	Hig		DC4.83V	 DC0.49V	I=0.1mA	
AL1		Voltage	Lo	w –	_	DC0.49V	I=0.01mA	
AL2	Ω AL1							
	W-O							
4/K 52 ≥	Al2							
///								
端子番号	機能説明							
[CN8] Ch.9	Ground for control input output terminal (CN8).							
GND	Signal ground							
[CN8] Ch.10	DC5 V reference							
DC5V	(DC5V	+/- 10%))					



TWINBIRD CORPORATION

(45/48)

14.仕様(6/6)

14.6 [SW1] 出力速度設定

SW1	使用可否	ステップ毎の	個問かる是	大出力までの目安時間
3001	使用可口			-
		出力時間		ミでのステップ:256step)
0000~0101	使用しない	(sec/step)	*制御之	入力=100%条件
0110 *初期値		4.0	17min00sec	
0111		4.8	20min24sec	
1000		5.6	23min48sec	設定例:「0111」
1001		6.4	27min12sec	
1010	使用可	8.0	34min00sec	
1011	使用可	10.4	44min12sec	
1100		12.8	54min24sec	
1101		16.0	1h08min00sec	
1110]	19.2	1h21min36sec	
1111		22.4	1h35min12sec	

<u>14.7 その他環境条件(IEC 規格)</u>

本製品は以下の環境条件での使用となります。 湿った場所で使用しないでください。 ・屋内使用 ・2000m 以下の高度

•汚染度:2

14.8 品番とシリアル番号の記載位置

お問い合わせの際にお伺いいたしますので、事前にご確認をお願いします。 ①製品・・・バーコードの下。14桁の番号です。 ②駆動基板・・・14桁の番号です。



14.Specification(6/6)

14.6 [SW1] Setting of Rump up Speed Change for FPSC DRIVING

SW1	Usable	Output time		me from start to Maximum
		per step	(Step betwee	n Start to Max.:256step)
0000~0101	Not use	(sec/step)	*Cor	ntrol input =100%
0110 *Default		4.0	17min00sec	
0111		4.8	20min24sec	
1000		5.6	23min48sec	Setting example
1001		6.4	27min12sec	
1010	Use	8.0	34min00sec	8222
1011	USe	10.4	44min12sec	T 2 3 4
1100		12.8	54min24sec	[0111]
1101		16.0	1h08min00sec	
1110		19.2	1h21min36sec	
1111		22.4	1h35min12sec	

14.7 Environmental Condition (IEC)

This product is used under the following environmental conditions.

Do not use in damp places.

Indoor use

•Altitude up to 2,000m

Pollution degree:2

14.8 Indication position of Model Number and Serial Number

Please check them in advance. We will ask for these numbers when you contact us. ①Product···Under the barcode.14digits. ②DRIVE PCB···14digits.



TWINBIRD CORPORATION

(46/48)

リインバード工業株式会社

<u>15.アフターサービス</u>

*事前に品番と2つのシリアル番号(下記【番号表示位置】①②に記載)をご確認ください。 【15.1 保証期間について】

保証期間	本製品の保証期間は弊社からの 出荷日起算で18か月です。 ただし、お取り扱いにおいて、本書の 「製品の使用条件(免責事項)」「安全上の ご注意」の条項に準拠しない場合は、保証の 対象とならないためご注意ください。	【番号表示位置】 ①製品上のバーコードシール …14桁の数字 「FSC MOULE 08 「TYPE S 」 」 日本で「「SC MOULE 08 」 日本で「「SC MOULE 08 」 日本で「「SC MOULE 08 」 日本で「「SC MOULE 08	Warranty period	"FPSC MODULE 08 (SC-UG08S/N)" and "FPSC UNIT 08 (SC-TG08S/N)" are covered with Eighteen (18) months warranty, provided that shit 18 months warranty shall be effective subject to Customer's compliance to "Disclaimer" "Safety Notice" clause in the User's manual of products. The warranty period begins from the date of shipment from TWINBIRD.	[Number position] (DBarcode Label on Product 14digits 00942220000000 USE Model No.		
保証期間内	無料で修理いたします。ただし、下記の様な 場合は、保証期間中でも、有償修理になる ことがあります。 *製品の外観に対する物理的な損傷 *熱除去が不十分なため、製品の過熱(60℃以上) *仕様外の使用に伴うもの	②基板上···· <u>14 桁の数字</u> 198315 000002 01	Within Warranty period	The product will be repaired free of charge by TWINBIRD (but subject to Customer's compliance to the "Warning and Caution clause in the User's Manual of the product), except for the following: *Physical damage to the exterior of the product. *Overheating (Greater than 60°C) of the product due to lack of heat radiation. *Failure due to use that does not meet specifications.	2 on DRIVE PCB···· <u>14digits</u> 198315 00002 01		
保証期間内の 修理製品の保証	修理返却後の新しい保証期間は、「90日または いた期間のいずれか長い方」になります。	18か月から実際の所有期間を差し引	Warranty of repair product within the warranty term	The new warranty period will be 90days of 18 months minus period of actual possession by CUSTOMERS, whichever is greater.			
保証期間外の 修理(有償修理)	お客様のご依頼に基づき修理可能な場合は、お客様の費用負担において、製品およ び部品の修理または交換をお受けします。(お見積りをご提示いたします)。		Repair after the warranty period has expired. (Repair fee)	ask TWINBIRD to repair or replace the fter assessing the damage, TWINBIRD			



*Please check Model Number and two serial numbers ([Number position] 1 2 in below image) in advance. [15.1Warranty Terms]



16.お問い合わせ

(修理品送付先)

*事前に、品番と2つのシリアル番号(15.アフターサービス内【番号表示位置】①②に記載)をご確 認ください。

<お問い合わせ> 製品の修理に関するお問い合わせは以下にご連絡ください。

電話番号

(専用窓口)	フリーダイヤル	0120-337-445	お客様サービスライン
承り時間	ファクシミリ	0256-93-1077	
平日:9:00~17:00	Eメール	afterservice@twink	bird.co.jp

16.Contact Us

*Please check Model Number and two serial numbers ([Number position]] (1) (2) in 15.After sales service) in advance. <Contact>For product inquiries, please contact below

(HOTLINE) Facsimile +81-256-93-1077 E-mail afterservice@twinbird.co.jp Quality Customer Service Line

〒959-0292 新潟県燕市吉田西太田 2084-2 (Repairing Address) 2084-2, Yoshida-nishiota, Tsubame-shi, Niigata-ken, ツインバード工業株式会社 修理サービスセンター 959-0292, Japan 0256-92-8875 TWINBIRD CORPORATION Repair Service Center



TB-00012388-2

(48/48)